

EFM Exporter

© 2017 PTC Inc. All Rights Reserved.

Table of Contents

EFM Exporter	1
Table of Contents	2
EFM Exporter	6
EFM Drivers	8
User Interface	10
Poll Group	11
Meter Group	13
Meter	13
Exporters	15
CSV Exporter	16
Properties - General	17
Configuration Field Mappings	17
Alarm Field Mappings	19
Mapping CSV Attributes	19
Database Exporter	21
Configure DSN	22
Mapping Group Properties - General	23
Configuration Field Mappings	23
Alarm Field Mappings	24
Mapping Database Attributes	25
Flow-Cal Exporter (CFX)	27
Flow-Cal Transaction Queue Exporter	29
Configure DSN	30
PGAS Exporter	32
Mapping PGAS Exporter Attributes	33
Wildcards	40
Attribute Enumerations	41
CSV Import / Export	48
System Tags	56
Error Descriptions	58
General Error Messages	58
Attribute look up for the meter_id failed for <meter name>. The MeterID wildcard is replaced with <Channel>_<Device>_<Meter>_NoMeterID.	59
<Error cause> may strand unexported data stored at <Location>. Stranded data will not be exported. Please see help file for more details.	60
<Poll group> ended on demand poll at <time>.	60

<Poll group> ended poll at <time>. Next poll scheduled for <time>. 60

<Poll group> first poll scheduled for <time> local time. 60

<Poll group> overran the next scheduled poll at <time>. The next poll has been rescheduled for <time> local time. 61

<Poll group> starting on demand poll at <time>. 61

<Poll group> starting scheduled poll at <time>. 61

Error adding exporter <exporter name>: can't add gas exporters to liquid meters and can't add liquid exporters to gas meters. 62

Exporter <exporter> failed to append to the existing <file> file. A new file is being created. Data from the existing file will be deleted. 62

Exporter <exporter> failed to move meter data from temp directory <temp file> to <output file> (reason: <reason>). The data will stay in the temp directory, and an attempt will be made to move the file after the next poll. 62

Failed to add <EFM data that failed> data for meter <poll group name>.<meter type>.<channel name><device name><meter name>. 63

Failed to add meter <meter> to <poll group>. The meter already exists. 63

Failed to load data from <file name>. This data will not be available in future exports. 63

Failed to register meters for <poll group name>. Please verify the meter configuration is correct. Polling will not start until the problems are resolved. 64

Failed to remove temporary meter data file <file path>. Reason: Configuration change. 64

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. The data is lost. 65

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. Reason: Failed to update temporary data store file (unknown). 65

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. Reason: Failed to reset data store file (unknown). 65

Flow-Cal EFM data cached from the previously installed version is being converted. All EFM polls will be postponed until the conversion is complete. 66

Flow-Cal EFM data conversion complete. Legacy cached Flow-Cal EFM files have been moved to <backup directory>. 66

Flow-Cal EFM data conversion failed. <Extended Error>. Exported data will not include previously cached data. 67

Ignoring enable for <exporter>. The exporter group <exporter group> is disabled. 67

Ignoring enable for <meter>. The meter group <meter group> is disabled. 67

Ignoring on demand poll request for <meter>. A poll for this meter is already queued. 68

Ignoring on demand poll request for <meter>. The meter is disabled. 68

Ignoring on demand poll request for <meter>. The meter's group must have at least one enabled exporter and the meter must be licensed. 68

Ignoring on demand poll request for <poll group>. A poll is already in progress. 69

Ignoring on demand poll request for <poll group>. The group has not initialized yet, or one of the meters or exporters is incorrectly configured. 69

Ignoring on demand poll request for <poll group>. The group is disabled. 70

Ignoring on demand poll request for <poll group>. The group must have at least one enabled 70

exporter and at least one enabled and licensed meter.	
Mapping name invalid due to invalid characters, name length, or name duplication. Mapping <MappingPath.OldName> has been renamed to <NewName>.	70
Meter <Meter> returned bad quality EFM data. This EFM data will not be included in the output. ...	71
Meter <Meter> returned bad quality EFM data for [<EFM data that failed>]. This EFM data will not be included in the output.	71
No new data for meter <meter> exporter <exporter>.	72
The licensed device count of <device license limit> has been exceeded by <unlicensed device count> device(s).	73
CSV Exporter Error Messages	73
CSV exporter <exporter> failed to output data for meter <meter>. The meter did not provide valid configuration data.	73
Failed to save EFM data for exporter <exporter> to file <CSV file> (reason: <reason>). The oper- ation will be reattempted on the next poll.	74
CSV Import / Export Error Messages	74
Error importing CSV data. Invalid exporter group path: <path>.	74
Error importing CSV data. Invalid meter group name: <meter group>.	75
Error importing CSV data. No records found in CSV file.	75
Error importing CSV tag data. Field buffer overflow reading identification record.	75
Error importing CSV tag data. Unrecognized field name: <field name>.	76
Error importing tag database. Duplicate field name: <field name>.	76
Error importing tag database. Missing tag field identification record.	76
Database Exporter Error Messages	76
Cannot connect to DSN <DSN name> - unable to connect to data source (Memory Exception).	77
Cannot connect to DSN <DSN name> - unable to connect to data source (Reason: <reason>).	78
Creation of at least one TIMESTAMP column for table <table name> has been requested. This has been adjusted to the MS-SQL required DATETIME.	78
Error importing CSV tag record <record number>: login timeout of <value> is out of range. Login timeout set to <value>.	78
Error importing CSV tag record <record number>: table generation type <type> is not supported. Table generation type set to <type>.	78
Failed to create table <table name> for unknown reason. SQL query: <query>.	79
Failed to create table <table name> on DSN <DSN name>. (Reason: <reason>).	79
Failed to create the data table <table name> - <reason> SQL query: <query>.	79
Failed to create the data table <table name> (Memory Exception). SQL query: <query>.	79
Failed to validate table <table name>. (Reason: The configured column name <column name> could not be found).	80
Table generation is not supported for ODBC driver.	80
Table validation failed. The table does not exist.	80
The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions.	80

Unable to open recordset on table <table name> (Memory Exception).81

Unable to open recordset on table <table name> (Reason: <reason>).81

Unable to retrieve column names on table <table name> because the table does not exist.81

Unable to retrieve table column names on table <table name> (Reason: <reason>).81

Unable to retrieve table names. 82

Unable to retrieve table names (Reason: <reason>). 82

Unable to validate table <table name> (Memory Exception).82

Unable to validate table <table name> (Reason: <reason>). 82

Unknown error opening recordset on table <table name>.83

Flow-Cal Exporter Error Messages83

Flow-Cal exporter <exporter> failed to

EFM Exporter

Help version 1.116

CONTENTS

[Overview](#)

What is the EFM Exporter?

[EFM Exporter Interface](#)

How do I navigate the EFM Exporter?

[Attribute Enumerations](#)

What attribute enumerations are supported by the CSV and database exporters?

[CSV Import / Export](#)

How do I import and export a CSV file into the EFM Exporter?

[System Tags](#)

Which system tags does the EFM Exporter support?

[Error Descriptions](#)

What error messages does the EFM Exporter produce?

Overview

In pipeline management of the oil and gas industry, it is necessary to collect both real-time and historical flow measurement data. Real-time data is used for monitoring well-site tank levels or equipment at compressor stations, and may also be used for controlling valves, pumps, and so forth. The historical flow data (sometimes referred to as "the audit trail") is used for allocations and custody transfer, which is a term used by the oil & gas industry for managing invoices and payments when one company's pipeline feeds into another company's pipeline. The data can also be used by operations to monitor performance. Because it is used for billing purposes, this data is extremely sensitive and needs to be accurate, reliable, and auditable.

Historical flow data is often referred to as Electronic Flow Measurement (EFM). The data consists of hourly and daily flow averages calculated by flow computers reading raw data from one or more flow meters. It also consists of configuration data, alarms, and events. The hourly and daily averages are calculated and stored because it often is not possible to access real-time flow values due to remote geographic locations and the number of flow computers. Furthermore; radio, cellular, and satellite communications are frequently needed to reach these devices. Due to the low bandwidth of these networks and the large number of devices with which a company may be communicating, it is necessary to schedule specific times to communicate with the devices.

The EFM Exporter manages the scheduled polling and exporting of EFM data from flow computers. Customers can group meters under specific poll schedules, and upload data into flow measurement and accounting solutions (like Flow-Cal and PGAS) as well as to user-defined CSV and database formats. Furthermore, the EFM Exporter uses consistent appearance and navigation for oil & gas companies that manage both liquid and gas products.

Supported Export Formats

- Flow-Cal V5 (CFX)
- Flow-Cal Transaction Queue
- CSV
- Database
- PGAS V8

[Licensing the EFM Exporter](#)

Licensing the EFM Exporter

The EFM Exporter uses a tiered, device-count-based licensing model. A license can be purchased that enables the product to run for an unlimited amount of time for a fixed maximum number of unique EFM devices. The license limit does not prevent the addition of new EFM devices beyond the allowed EFM device count, nor does it signal the product to enter Time Limited mode; it prevents EFM data uploads beyond the allowed license count.

The licensed and configured EFM device counts are reported in the Event Log on server startup, when the runtime server re-initializes, or when a unique EFM device is added or removed in the configuration that exceeds the EFM device limit allowed by the license. A unique device is defined as one instanced of the channel-device combination. Any number of meters may be added to a device without consuming an additional device license.

Below is an example startup server informational Event Log message indicating a 1000 EFM Device license installed with 789 unique EFM devices configured in the project:

```
"License Type: Counted, License Limit: 1000, Devices: 789 licensed, 0 unlicensed."
```

Below is an example Event Log warning message when a license is exceeded. In this example, there is a 1000 EFM device license installed and 1007 unique EFM devices in the project:

"The licensed device count of 1000 has been exceeded by 7 device(s)."

If the license limit is exceeded, existing unique EFM device references can be removed to return within the limits of the license or to allow new unique EFM devices to be added and utilized. When the EFM device count is back under the license limit, an Event Log message is no longer posted to indicate the product has exceeded the limits.

● Note: When the license limit is exceeded, the EFM Exporter processes the licensed number of unique EFM devices configured; the devices considered licensed can vary based on the order they are loaded in the server during startup.

Unlicensed Operation

When no license is installed, the product enters Time Limited mode, which allows a time-based limit that stops working when Time Limited mode expires.

EFM Drivers

The EFM Exporter only works with EFM drivers, which are drivers that expose meters and usually contain some level of EFM-specific configuration. EFM drivers share several functions that affect the EFM Exporter.

Interleaving

EFM drivers are responsible for interleaving real-time data (tag) requests and EFM polls. This allows real-time tag updates to continue for a channel while EFM data is being polled for a device.

● Note: While interleaving, the priority in order of highest to lowest is as follows: writes, reads, and exception-based reads. EFM polls are considered reads.

New EFM Data

EFM drivers are responsible for caching the latest EFM data that has been gathered from the device to ensure that each poll only requests new EFM data. For example, after startup, the first poll requests all the History data in the device. The next poll only retrieves the new History data recorded after the first poll.

Cached EFM Data

All EFM drivers clear their cached state when a new project is loaded. Once cleared, the first poll requests all the data in the device. All other scenarios that cause the cached state to clear are driver-specific. For more information, refer to the specific driver's help file.

● Drivers can also clear the cache through the user interface. *For more information, refer to the specific driver's help file.*

Shared EFM Data

Some devices have shared data. For example, a device may have one Alarm archive for all meters. The driver is responsible for ensuring that the Shared EFM data is only read once per poll, even if multiple meters are defined that rely on the same shared data.

Missing EFM Data

If EFM data is missed because of a communications error, the driver continues to cache the latest good data that is retrieved from the device. When communications return, the EFM Exporter re-polls the device at the scheduled poll interval and the driver queries for new data (which includes the missing data). Client applications can trigger a poll to speed this process.

Time Zone

Users are responsible for understanding the physical device's time zone and Daylight Saving Time capabilities. Configuring the EFM-compatible driver's time zone and Daylight Saving Time to match the physical device ensures that record times are accurately converted by the exporters that perform that function.

EFM Pointer Files

EFM pointer files are used by EFM drivers to persist flow computer EFM archive positions across server restarts. Preserving this state information allows EFM drivers to minimize the amount of data uploaded from a flow computer after the server restarts. The pointer files are maintained in the server's application data directory, which is a directory that is configured when the server is installed. The server maintains these pointer files across server restarts, upgrades, and uninstallations, except when the Remove user data. The current Runtime project and custom server settings are removed. option is selected when uninstalling.


The server can be forced to upload all available EFM data from a flow computer by performing a "Clear Cache" on the device associated with the desired meters. For instructions on clearing the cache, refer to the specific driver's help file.

● Note: EFM drivers expose system tags that allow clients to control a device's EFM pointer file and cache.

● For more information, refer to the [System Tags](#).

User Interface

The EFM Exporter interface is divided into three panes: the Project View, the Detail View, and the Event Log.

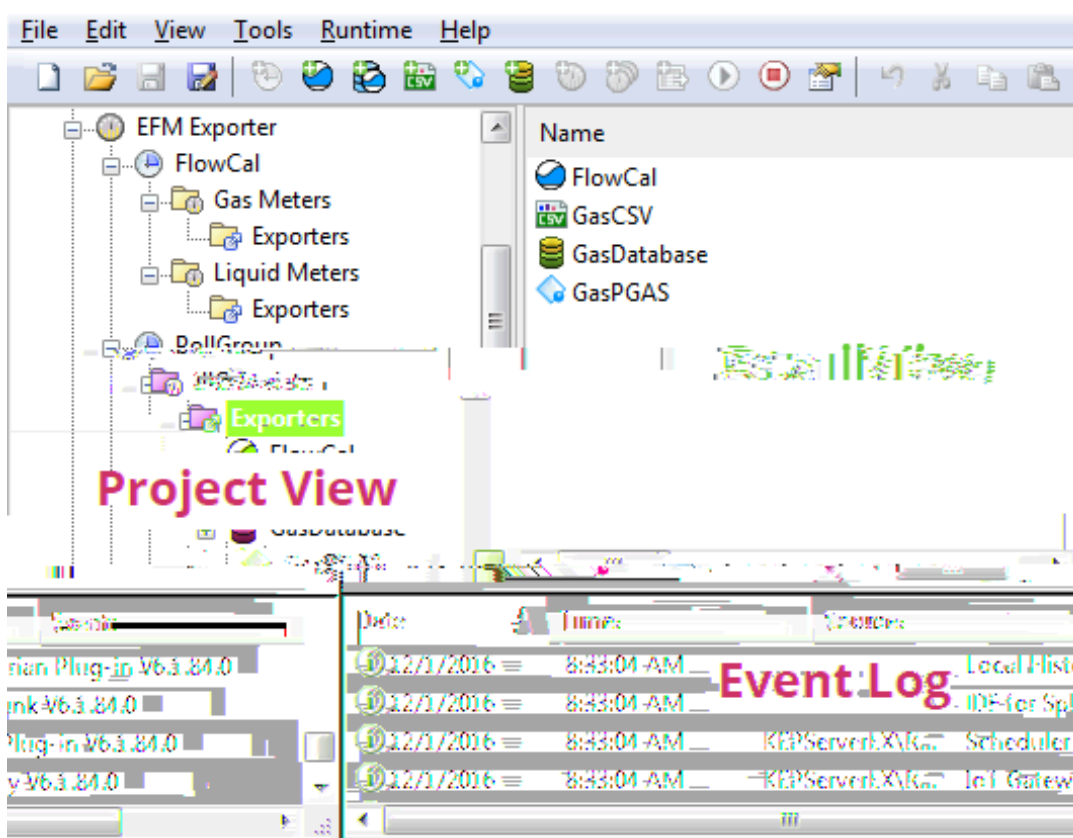

Project View: This view displays poll groups, which control when EFM data is collected. Each poll group contains a folder for gas meters and liquid meters, which in turn contain a folder for exporters. Meters represent a meter that is attached to a device or flow computer. There may be multiple meters for one device. Exporters represent the output formats that are supported by the plug-in. Database and CSV exporters contain mapping group folders. These folders represent collections of configurable EFM data that is exported when an exporter polls. The poll group polls child meters for EFM data and then passes that data to the exporters (which are the output formats supported by the EFM Exporter).

For more information, refer to [Poll Group](#), [Meter](#), and [Exporters](#).

Detail View: This view depends on the folder that is selected in the Project View. When the gas meters or liquid meters folder is selected, the Detail View displays the meters that are assigned to the poll group. When the exporters folder is selected, the Detail View displays the exporters that are utilized in the poll group. When a mapping groups folder is selected, the Detail View displays the utilized mappings.

For more information, refer to [Meter](#).

Event Log: This displays error, warning, and information messages for the plug-in and the server. The source of EFM Exporter events is EFM Exporter.

Poll Group

The poll group controls when EFM data is collected from the child meters and exported through the child exporters.

Note: EFM data is not stored in an intermediate database: it comes directly from the meter and goes directly to the exporter.

Property Groups General	[-] Identification	
	Name	PollGroup
	Description	
	[-] Configuration	
	On Demand Polling Only	No
	Poll Rate	1
	Poll Rate Units	hours
	Base Start Time	12:00:00 AM
	Poll On Start	No
	Enabled	Yes

Name: Specify a unique name for the poll group. The default setting is "PollGroup."

Description: Specify a short phrase to describe this in a manner that identifies the data or purpose in reports or downstream analysis (optional).

On Demand Polling Only: When enabled, this option specifies that polling only occurs on writes to the poll group's poll tag. The server does not schedule polls. The default setting is disabled.

Note: The poll group's poll tag is available through OPC and other client interfaces that are supported by the server. This allows any OPC client to control polling.

Poll Rate: Specify the amount of time between EFM data polls, and may be set in terms of Minutes, Hours, or Days as configured in the Poll Rate Unit property. The valid range is 1 minute to 90 days. The default setting is 1 hour.

Note: On Demand polls and polls on Start does not affect scheduled polls.

Poll Rate Units: Specify the units used by the Poll Rate property. Units can be minutes, hours or days.

Base Start Time: Specify the base 24-hour time at which polling starts. The default setting is 12:00 AM.

Notes:

1. If the poll rate is greater than 24 hours, this time represents the time of day to start the first poll. For example, if the Base Start Time is set to 10:01:00 AM, the poll rate is 24 hours, and it is currently 1:10:00 PM; the first poll occurs the next day at 10:01:00 AM. If the poll rate is less than 24 hours, polling begins at the next available interval (as if it started at the Base Start Time). For example, if the Base Start Time is 10:01:00 AM, the poll rate is 1 hour, and it is currently 1:10:00 PM; the first poll occurs at 2:01:00 PM.
2. Base Start Time does not adjust for Daylight Saving Time. If polls need to correspond with Daylight Saving Time, a restart is required after a Daylight Saving Time transition to synchronize to the adjusted time.

Poll On Start: When enabled, this option starts a poll as soon as the EFM Exporter is started. This occurs when the server is restarted, stopped / started, when a new project is loaded, or when the EFM Exporter is edited. The default setting is disabled.

Enabled: When enabled, this option enables polling in the EFM Exporter. When unchecked, the EFM Exporter does not poll. The default setting is enabled.

Failed Polls

Polls can fail for a meter under the following conditions:

- When the device experiences a failure in communications, which prompts a meter to return bad quality data.
- When the serial device is configured with an invalid COM port, or has specified a connection type of None.

In both failure scenarios, the poll group continues to gather available EFM data. It fails to export any EFM data that could not be gathered and displays an error message in the Event Log in consequence. The EFM data successfully gathered is exported.

Meter Group

Every meter group has the following properties, which are common across all meters in the group:

Name: Verify the name. This field is read-only.

Enabled: Select Yes to enable the output for this group. The default setting is Yes (enabled).

Property Groups	<input type="checkbox"/> Identification	
General	Name	Liquid Meters
	<input type="checkbox"/> Configuration	
	Enabled	Yes

Meter


Each EFM Device has one or more gas or liquid meters that may contain optional EFM data. When polling, EFM data is gathered for each meter in the following order:

- Configuration
- Liquid Product
- History (Hourly, Daily, and Batch)
- Alarms
- Events

● Notes:

1. Batch and Liquid Product meter data is only available to liquid meters.
2. A gas meter poll only collects newHistory, Alarms, and Events data for a gas meter. A liquid meter poll only collects newHistory, Alarms, Events, and Batch data for a liquid meter. These types of EFM data are optional.

● Important: The device configuration controls the data that is gathered as well as how the data is mapped to internal EFM Attributes. For more information, refer to the specific driver's help file.

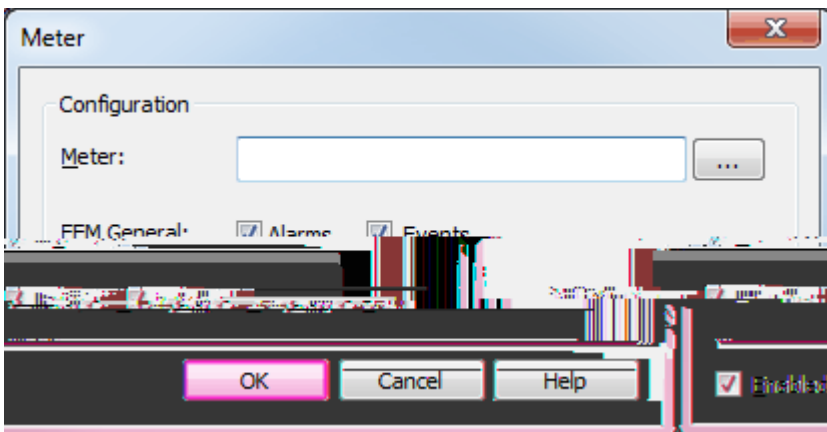

Meter: Specify the meter name. When browsing, the meter name is automatically generated using the format `<Channel>.<Device>.<MeterName>`, where `<Channel>` and `<Device>` are created and named in the server's Channels/Devices Project View, and the `<MeterName>` is set in the `<Device>` configuration. For example, "EFM Simulator.Device1.GasMeter1".

Note: To browse the server configuration for meters, click the browse icon. For more information, refer to [Meter Browser](#).

EFM General: Specify the type of data that the EFM Exporter reads for the meter. Options include Alarms and Events. All options are checked by default when applicable. Descriptions of the options are as follows:


- Alarms: When enabled, meter Alarms are uploaded. The device configuration defines what constitutes a meter Alarm.
- Events: When enabled, meter Events are uploaded. The device configuration defines what constitutes a meter Event.

EFM History: Specify the history data to be collected for the meter. Options include hourly and daily (batch is available to liquid meters only). All options are enabled by default when applicable. Device configuration controls the EFM data in a record based on the enabled option(s).

Enabled: When enabled, this option enables data export in the meter. When disabled, the EFM Exporter does not pull any data from the meter. The default setting is enabled.

Meter Browser

Only EFM-enabled devices of the specific meter type are displayed. For example, when adding a new meter to the gas meters folder, users are only able to browse for available gas EFM meters. Liquid EFM meters are not displayed to help avoid configuration errors.

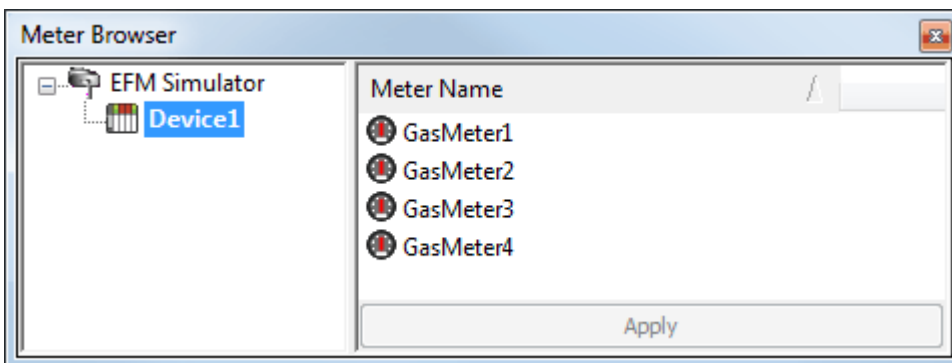

Best Practices

It is not recommended that users include a device under multiple poll groups. The server caches EFM data (e.g. last poll time) for each device. If a device is in more than one poll group, this can result in inconsistent data being exported by each poll based on poll timing. For example, data collected for a device by the first poll group is not re-collected by the next poll group.

Exporters

Exporters take the data that was collected from each meter during a poll and then export it to a given format. Exporters ignore meter data that they are not configured to export. If an exporter requires meter data that is not available, it outputs an Event Log message. An exporter's configuration and behavior is unique, and depends on the exporter type. For more information on a specific exporter, select a link from the list below.

[CSV Exporter](#)

[Database Exporter](#)

[Flow-Cal Exporter \(CFX\)](#)

[Flow-Cal Transaction Queue Exporter](#)

[PGAS Exporter](#)

Every exporter group has the following properties, which are common across all exporters in the group:

Name: Verify the name. This field is read-only.

Enabled: Select Yes to enable the output for this group. The default setting is Yes (enabled).

Property Groups	[-] Identification	
General	Name	Exporters
	[-] Configuration	
	Enabled	Yes

• The "Enable" and "Disable" icons are conveniently located in the EFM Exporter toolbar for quick access. When a group is disabled, all child objects beneath it are also disabled. When the group is disabled, users cannot enable an exporter.

CSV Exporter

The CSV exporter exports gas or liquid meter EFM data to CSV files. An output file is created for each enabled mapping group; for gas meters, that can be Config, Alarms, Events, and History; for liquid meters, that can be Config, Liquid Product, Alarms, Events, History, and Batch. Each of these types are represented by configurable mapping groups under the exporter.

Note: When actively reading or writing CSV data, the CSV exporter enforces a file-locking scheme that prohibits external entities from opening the output file until the read or write is complete.

Property Groups																
General	<div style="border: 1px solid black; padding: 5px;"> <div style="border-bottom: 1px solid black; padding-bottom: 5px;"> Identification </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">Name</td> <td>GasCSV</td> </tr> <tr> <td>Description</td> <td></td> </tr> </table> <div style="border-bottom: 1px solid black; padding-bottom: 5px;"> Configuration </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Enabled</td> <td>Yes</td> </tr> </table> <div style="border-bottom: 1px solid black; padding-bottom: 5px;"> Record Time </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Time Basis</td> <td>Device Time</td> </tr> <tr> <td>Time Format</td> <td>MM-DD-YYYY hh:mm:ss</td> </tr> </table> <div style="border-bottom: 1px solid black; padding-bottom: 5px;"> Encoding </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Character Encoding</td> <td>UTF-8</td> </tr> <tr> <td>Delimiter</td> <td>Comma (,)</td> </tr> </table> </div>		Name	GasCSV	Description		Enabled	Yes	Time Basis	Device Time	Time Format	MM-DD-YYYY hh:mm:ss	Character Encoding	UTF-8	Delimiter	Comma (,)
Name	GasCSV															
Description																
Enabled	Yes															
Time Basis	Device Time															
Time Format	MM-DD-YYYY hh:mm:ss															
Character Encoding	UTF-8															
Delimiter	Comma (,)															

Name: Specify the name of the CSV exporter that is being configured. When a new CSV exporter is created, this property generates a name that is unique across all other exporters. The name can be customized from the defaults of "GasCSV" and "LiquidCSV". Each additional file created has an automatically incremented integer attached to the end of the name.

Description: Specify a short phrase to describe this in a manner that identifies the data or purpose in reports or downstream analysis (optional).

Enabled: Select Yes to enable polling in the CSV exporter. Select No to disable so the CSV exporter does not poll. The default setting is Yes / Enabled.

Time Basis: Specify the format of the EFM time records. Options include Device Time, UTC, and Local System Time. The default setting is Device Time. Descriptions of the options are as follows:

- Device Time: When selected, the EFM time records are the default time of the device.
 - UTC: When selected, the EFM time records are in Coordinated Universal Time (UTC).
 - Local System Time: When selected, the EFM time records are the time of the local system.
- Note:** This setting does not affect any wildcards that may be set in the Time Format property.

Time Format: This property allows users to edit the Time Format of the output file. Wildcards include MM, DD, YYYY, hh, mm, ss, and AMPM. Users can arrange the wildcards in any order and delimit them as desired. All other characters are output as written. The default setting is MM-DD-YYYY hh:mm:ss.

Important: If the string is changed to YYYY-DD-MM hh:mm:ss and the output CSV is loaded to Microsoft Excel, the string is interpreted and displayed according to Excel's own date/time column rules.

Note: Records are stored in memory as UTC. To load and convert record times to a different Time Basis (e.g. manage Daylight Saving Time), all elements of the time/date must be recorded. For example, if a user enters "DD-MM-YY hh:mm (AMPM)" and the current record time he

default setting is UTF-8. Descriptions of the options are as follows:

- UTF-8: When selected, the code points are represented by sequences of bytes that are up to 4 bytes long. UTF-8 (or 8-bit Unicode Transformation Format) is a variable length character encoding for Unicode that is ANSI compatible and compact. Information about the length of the sequence is encoded in the upper bits of each byte of the sequence.
 - ANSI: When selected, ASCII encoding is extended to different languages. The lower 127 characters retain the ASCII character mapping and the top 128 characters vary depending on the system.
- Note: If a file is selected for import that does not contain a Byte Order Mark (BOMM

Property	Description
	Turbine = 3 Ultrasonic = 4 Liquids = 5 Vcone = 6 Coriolis = 7 Line Pack = 8
Calculation Method	Aga3 1985 = 1 Aga3 1992 = 2 Aga5 = 3 Aga7 = 4 Vcone4 = 5 Aga11 = 6 Line Pack Calc = 7
Meter Tap	Flange = 1 Pipe = 2
Static Pressure Tap	Up = 1 Down = 2
Units of Measurement	English = 1 Metric = 2
Hourly Record Span	Leading = 1 (Leading Contract Hour 8 = 8:00-8:59) Trailing = 2 (Trailing Contract Hour 8 = 7:01-8:00)
BTU Base	Wet = 1 Dry = 2 As Delivered = 3
Pipe and Plate Material	Stainless Steel = 1 Carbon Steel = 2 Monel = 3
FPV Method	Nx 19 = 1 Aga8 Detail = 2 Aga8 Gross1 = 3 Aga8 Gross2 = 4
Static Pressure Type	Gauge = 1 Absolute = 2
Unit Volume	Million Cubic Meters = 1 Thousand Cubic Meters = 2 ² Hundred Cubic Meters = 3 Cubic Meters = 4 Million Cubic Feet = 5 Thousand Cubic Feet = 6 ³ Hundred Cubic Feet = 7 Cubic Feet = 8
Unit K Factor	Counts Per Million Cubic Meters = 1 Counts Per Thousand Cubic Meters = 2 ² Counts Per Hundred Cubic Meters = 3 Counts Per Cubic Meter = 4 Counts Per Million Cubic Feet = 5

Property	Description
	Counts Per Thousand Cubic Feet = 6 ³ Counts Per Hundred Cubic Feet = 7 Counts Per Cubic Foot = 8

● Notes:

1. This table refers to attributes that are specific to gas meters.
2. This is the default if the units are Metric.
3. This is the default if the units are English.

Alarm Field Mappings

Property Groups	<input type="checkbox"/> Identification	
General	Name	meter_name
	Description	
	<input type="checkbox"/> Configuration	
	Attribute	Meter Name
	Attribute Description	The name of the meter as it appears in the user interface
	Data Type	String

Name: Specify the column name for the new EFM attribute. The default setting is ColumnName for new mappings.

Description: Specify a short phrase to describe this in a manner that identifies the data or purpose in reports or downstream analysis (optional).

Attribute: This drop-down menu lists all attributes that are available for selection. An attribute can be mapped to more than one column and appear multiple times in the row of CSV data. The default setting is <none>.

Note: An attribute that is specified as <none> is displayed as an empty column in the row of CSV data. This may be useful for adding lines of space to an output record.

Attribute Description: Verify this read-only property shows the correct detailed description of the selected attribute.

Data Type: This specifies the attribute's default data type. The default setting is <none>.

Note: The order of the items in the Attribute list is significant. The top item represents the leftmost CSV column; the bottom item represents the rightmost CSV column.

Important: The order by which mappings are exported in the CSV file can only be modified by editing the order in a serialized .JSON file. To do so, save the project and manually edit the .JSON file.

Database Exporter

The Database Exporter exports gas or liquid meter EFM data to SQL or ODBC databases for analytical and storage purposes. An output file is created for each enabled EFM type; for gas meters, that can be Config, Alarms, Events, Hourly History, and Daily History; for liquid meters, that can be Config, Liquid Product, Alarms, Events, Hourly History, Daily History, and Batch. Each of these types are represented by configurable mapping groups under the exporter.

Property Groups		
General	<input type="checkbox"/> Identification	
	Name	GasDatabase
	Description	
	<input type="checkbox"/> Record Time	
	Time Basis	Device Time
	<input type="checkbox"/> Data Source Properties	
	Data Source	
	User Name	
	Password	*****
	Login Timeout (s)	5
	<input type="checkbox"/> Configuration	
	Enabled	Yes

Name: Specify a unique name for the exporter. Each EFM Exporter must have a unique name that can neither start with an underscore nor contain a period. The maximum length is 1024 characters. The name can be customized from the defaults of "GasDatabase" and "LiquidDatabase".

Description: Specify a short phrase to describe this in a manner that identifies the data or purpose in reports or downstream analysis (optional).

Time Basis: Specify the format of the EFM time records. Options include Device Time, UTC, and Local System Time. The default setting is Device Time. Descriptions of the options are as follows:

- **Device Time:** When selected, the EFM time records are the default time of the device.
- **UTC:** When selected, the EFM time records are in Coordinated Universal Time (UTC).
- **Local System Time:** When selected, the EFM time records are the time of the local system.

Data Source: Specify the DSN for the database. *For more information, refer to [Configure DSN...](#)*

Note: If changes are made to the DSN configuration in the Microsoft ODBC Data Source Administrator, the exporter must be disabled and re-enabled to use the new DSN configuration. Starting and stopping the server also applies the new DSN configuration to the exporter.

User Name: Specify a user name for the DSN. It is only necessary if the data source requires it.

Password: Specify a password for the DSN. It is only necessary if the data source requires it.

Login Timeout: Specify how long the server waits for a response when attempting to connect to the DSN. At the end of that time, the connection attempt times out. The valid range is 1 to 99999 seconds. The default setting is 5 seconds.

Enabled: This option enables polling in the database exporter. When disabled, the database exporter does not poll. The default setting is enabled.


 The Defaults button restores the settings to the default / pre-set values.

• **See Also:** [Configure DSN](#)


Configure DSN

The Flow-Cal Transaction Queue Exporter supports only an Oracle database DSN. The Database Exporter supports MS SQL Server, MySQL, PostgreSQL, and MS Access DSNs.

1. To start, click the Browse button associated with the Data Source property to launch the Data Source Selection dialog.
2. Select the data source you wish to connect to. If you have not yet configured the data source. Click the Configure DSN... button to launch the Microsoft® ODBC Data Source Administrator dialog.

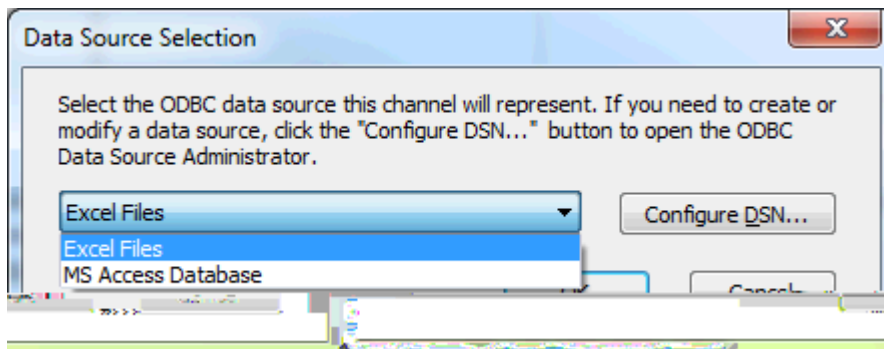

3. In the Microsoft® ODBC Data Source Administrator dialog, select the User DSN or System DSN tab depending on the type of DSN that is needed. Next, click Add....
 - For more details, see the [ODBC Data Source Administrator help](#).

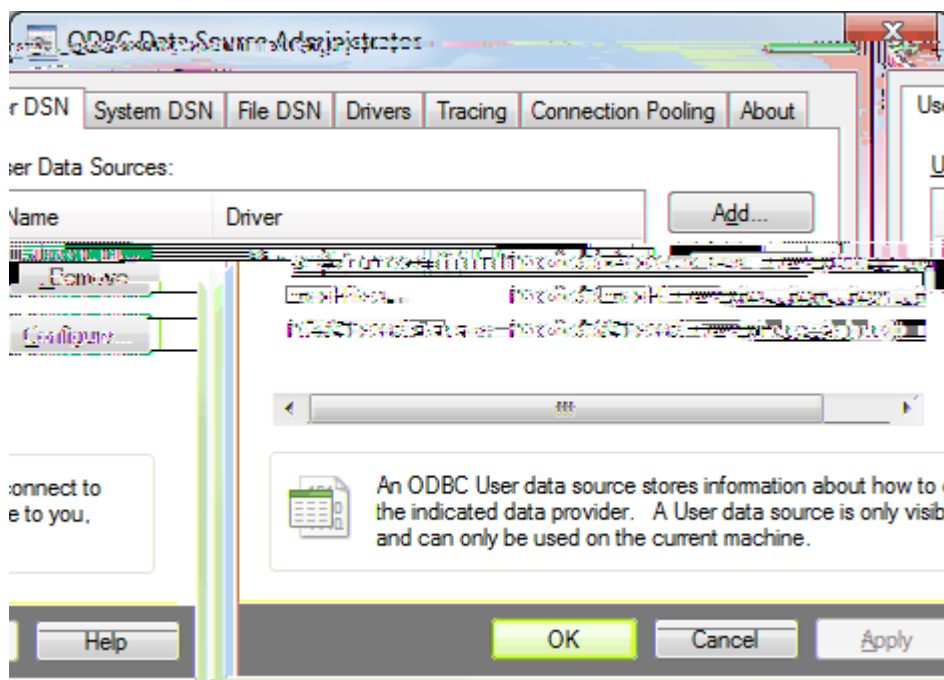

4. In Create New Data Source, locate and select the driver for the specific database. Then, click Finish.

5. Continue through the DSN Wizard.

● Note: The dialogs and fields presented

Property	Description
Meter Tap	Flange = 1 Pipe = 2
Static Pressure Tap	Up = 1 Down = 2
Units of Measurement	English = 1 Metric = 2
Hourly Record Span	Leading = 1 (Leading Contract Hour 8 = 8:00-8:59) Trailing = 2 (Trailing Contract Hour 8 = 7:01-8:00)
BTU Base	Wet = 1 Dry = 2 As Delivered = 3
Pipe and Plate Material	Stainless Steel = 1 Carbon Steel = 2 Monel = 3
FPV Method	Nx 19 = 1 Aga8 Detail = 2 Aga8 Gross1 = 3 Aga8 Gross2 = 4
Static Pressure Type	Gauge = 1 Absolute = 2
Unit Volume	Million Cubic Meters = 1 Thousand Cubic Meters = 2 ² Hundred Cubic Meters = 3 Cubic Meters = 4 Million Cubic Feet = 5 Thousand Cubic Feet = 6 ³ Hundred Cubic Feet = 7 Cubic Feet = 8
Unit K Factor	Counts Per Million Cubic Meters = 1 Counts Per Thousand Cubic Meters = 2 ² Counts Per Hundred Cubic Meters = 3 Counts Per Cubic Meter = 4 Counts Per Million Cubic Feet = 5 Counts Per Thousand Cubic Feet = 6 ³ Counts Per Hundred Cubic Feet = 7 Counts Per Cubic Foot = 8

● Notes:

1. This table refers to attributes that are specific to gas meters.
2. This is the default if the units are Metric.
3. This is the default if the units are English.

Alarm Field Mappings

The Alarms Output type includes the following properties:

- A timestamp (displayed in Device, Host system, or UTC time format) that marks when the alarm occurred.
- The type of alarm.
- The state of the alarm.
- The value of the alarm.
- The data type of the alarm value.

Note: The type, state, and alarm value data type fields are output as numeric codes. For more information, refer to the table below.

Property	Mapping
Alarm Data Type	Output corresponds to the Win32 VARTYPE data type.*
Alarm State	Off = 1 On = 2 Hi = 3 Lo = 4
Alarm Type	None = 0 Differential Pressure = 1 Static Pressure = 2 Temperature = 3 Cutoff = 4 Backflow = 5 Battery = 6

*Values for this data type correspond to the VarEnum enumeration, which is documented by Microsoft/MSDN at [VarEnum Enumeration](#).

Mapping Database Attributes


Property Groups	<input type="checkbox"/> Identification	
General	Name	avg_pressure
	Browse Column Names	Browse...
	<input type="checkbox"/> Configuration	
	EFM Attribute	Average Pressure
	Attribute Description	Average pressure over a period.
	SQL Data Type	NUMERIC

Name: Specify the column name for the new EFM attribute. The default setting is ColumnName for new mappings. When the output's Table Selection option is set to Log to an existing table, if this property is changed to a name that matches an existing column name in the database, the SQL Data Type and SQL Length properties are populated with the type and length matching that column in the database.

Browse Column Names: When the mapping group's Table Selection option is set to Log to an existing table, clicking Browse... queries the selected table for available column names. Select a column name and click OK to set that selection as the new Name.

EFM Attribute: This drop-down menu lists all EFM attributes that are available for selection. An attribute can be mapped to more than one column and appear multiple times in the row of data. An attribute that is

specified as <none> is displayed as an empty column. The default setting is <none>.

 **Important:** Do not attempt to map an EFM attribute to any table column that contains a generated key (such as IDENTITY in MS SQL Server, AUTO_INCREMENT in MySQL, or SERIAL in PostgreSQL).

Attribute Description: Read-only property that shows a detailed description of the currently selected attribute.

SQL Data Type: Specify the EFM attribute's SQL data type. The default setting is SQL_UNKNOWN_TYPE.

SQL Length: Specify the length of the SQL data Type. It is only enabled when the SQL data Type is SQL_UNKNOWN_TYPE, CHAR, VARCHAR, LONGVARCHAR, WVARCHAR, or WLONGVARCHAR. The valid range is 1 to 255. The default setting is 0.

Flow-Cal Exporter (CFX)

The Flow-Cal Exporter exports gas EFM meter data to V5 CFX files and liquid EFM meter data to V7 CFX files. Whether a new file is created per poll or data appended to an existing file depends on the configuration of the file path and file name properties. The Flow-Cal Exporter keeps a cache per meter, allowing it to append data to an existing file. The cache is cleared when the client application deletes the exported file.

Note: Times written to the CFX file use the local device time zone.

Property Groups	<input type="checkbox"/> Identification	
General	Name	FlowCal
	Description	
	<input type="checkbox"/> Configuration	
	History Type	Type 1(Gas-Basic)
	CFX File Version	Version 5
	History Interval	Hourly
	File Path	C:\Users\Default\AppData\
	Open Export Path	Open
	File Name	{MeterName}
	Enabled	Yes

Identification

Name: Specify a unique name. Each exporter must have a unique name that can neither start with an underscore nor contain a period. The maximum length is 255 characters. The default setting is FlowCal.

Description: Specify a short phrase to describe this in a manner that identifies the data or purpose in reports or downstream analysis (optional).

Configuration


History Type: Specify the type of history records to be exported. Different options are presented based on the type of meter being configured. Descriptions of the options are as follows:

- Type 1 (Gas - Basic): This type contains basic flow information for meters without online chromatographs (such as gas volume percentages). This is the gas default.
- Type 2 (Gas - NX19/G1/G2): This type contains data for NX19, Gross 1, and Gross 2 calculation methods (which are AGA and industry standard methods for calculating flow).
- Type 3 (Gas - Analysis): This type contains data for analysis values using AGA8-Detail calculations.
- Type 4 (Gas - Exotic): This type contains exotic analysis values that are not typically used or available.
- Type 11 (Liquid - Basic): This type includes basic liquid flow information without composition data.
- Type 12 (Liquid - Detail): This type includes detailed liquid flow information that is required for most standards. This is the liquid default.
- Type 13 (Liquid - Analysis): This type includes detailed liquid flow and analysis information.

Note: If Type 3 (Gas - Analysis) information is available from the device, but Type 1 (Gas - Basic) is selected, the additional Type 3 (Gas - Analysis) data is filtered out.

CFX File Version: Specify the CFX file version to be used when exporting data. For Gas data, this property is fixed to Version 5. For Liquid data, this property is fixed to Version 7.

History Interval: Specify what data set is exported from the device. The Flow-Cal Exporter supports the export of one history data set from the device per CFX file. Options include hourly and daily. The default setting is hourly.


 **Note:** If a meter does not supply daily data but daily is selected, the meter's Daily History data is not included in the CFX file. The same situation applies to hourly data. To export both daily and hourly data, create two Flow-Cal exporters.


File Path: Specify where the .CFX file is placed. Although the directory can be a UNC network path or a local path, the server Runtime must have write access to it. Network drives are not supported when the server is in Service Mode. A directory is created if one does not already exist. The default setting is the user's My Documents directory. Click the (...) Browse icon to locate and select a new file location.

Open Export Path: Click the [Open](#) text to select the file path without wildcards.

File Name: Specify the name of the file. It does not require a .CFX extension, and supports wildcards. For more information, refer to "Wildcards" below. The default setting is | MeterName| .

Enabled: This option enables polling in the exporter. When disabled, the exporter does not poll meters for data for this exporter. The default setting is enabled.

 The Defaults button restores the settings to the default /pre-set values.

 **Note:** The Flow-Cal Exporter keeps a local cache of the EFM data that was collected for each meter, allowing new data to be appended as it is collected. The cache grows until the exported data is consumed.

 **See Also:** [Wildcards](#)

Flow-Cal Transaction Queue Exporter

The Flow-Cal Transaction Queue Exporter exports gas EFM meter data to a Flow-Cal Transaction Queue database


Password: Specify a password for the specified user account; only necessary if the data source requires it.

• **See Also:** [Configure DSN](#)


Configure DSN

The Flow-Cal Transaction Queue Exporter supports only an Oracle database DSN. The Database Exporter supports MS SQL Server, MySQL, PostgreSQL, and MS Access DSNs.

1. To start, click the Browse button associated with the Data Source property to launch the Data Source Selection dialog.
2. Select the data source you wish to connect to. If you have not yet configured the data source. Click the Configure DSN... button to launch the Microsoft® ODBC Data Source Administrator dialog.

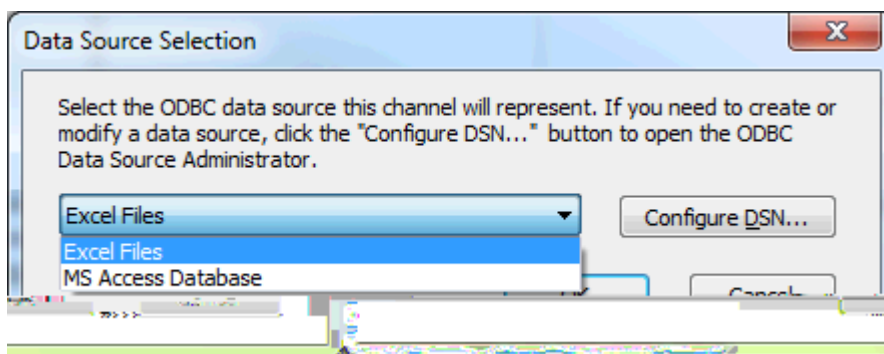

3. In the Microsoft® ODBC Data Source Administrator dialog, select the User DSN or System DSN tab depending on the type of DSN that is needed. Next, click Add....
- *For more details, see the ODBC Data Source Administrator help.*

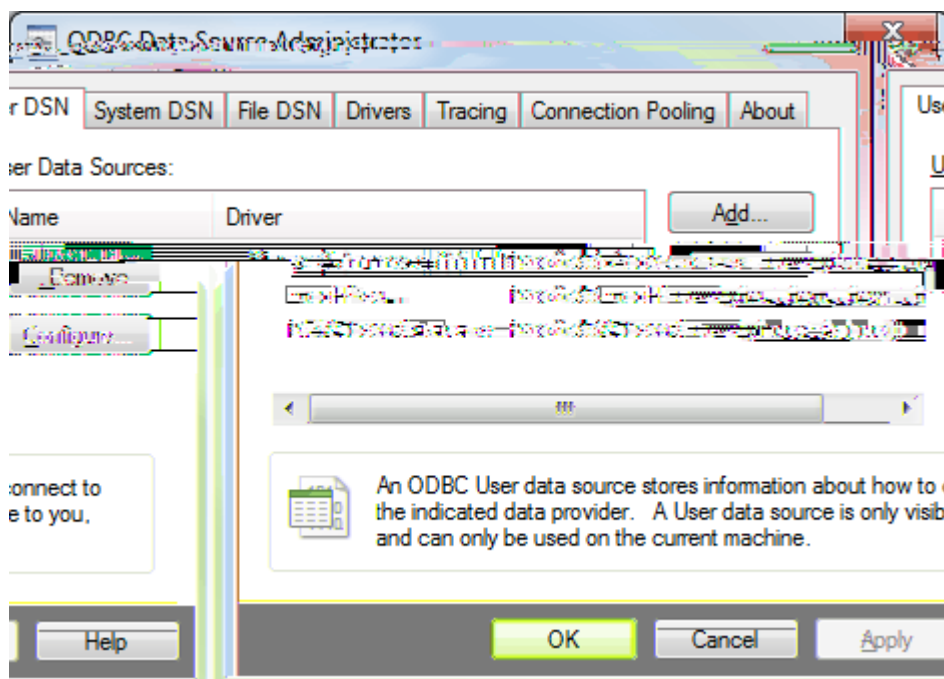

4. In Create New Data Source, locate and select the driver for the specific database. Then, click Finish.
5. Continue through the DSN Wizard.

● Note: The dialogs and fields presented in the DSN Wizard depends on the database connected and the DSN configured. If presented with a Test button, select it to verify that the DSN setup is functional.

PGAS Exporter

The PGAS Exporter exports four types of EFM record outputs: Alarms, Events, Analytics, and Volume. Each output contains a

provided but does not match the type required by the PGAS Exporter is removed, and the PGAS extension is added. When no extension is provided, the PGAS extension is appended.

Enabled: Select Yes to enable polling in the PGAS Exporter. When disabled, the PGAS Exporter does not poll. The default setting is Yes (enabled).

Gas Quality


Enable Analytics (.ANA): Select Yes to enable export of PGAS Analytics data. If enabled, specify how often the data is exported.


History Interval: Specify how often analytic data is exported. Options include hourly, daily, and both. The default setting is hourly. Device configuration controls the EFM data in a record based on the enabled option (s).

Gas Volume

Enable Volume (.VOL): Select Yes to enable export of PGAS Volume data. If enabled, specify how often the data is exported.

History Interval: Specify how often volume data is exported. Options include hourly, daily, and both. The default setting is hourly. Device configuration controls the EFM data in a record based on the enabled option (s).

 Note: The value that is configured for each output type is stored in the user application profile. Future EFM PGAS Exporter configurations is pre-populated with this information.

 The Defaults button restores the settings to the default / pre-set values.

 See Also: [Wildcards](#)

Mapping PGAS Exporter Attributes


For more information on a specific mapping, select a link from the list below.

[Alarms \(.ARM\) Mappings](#)

[Gas Quality \(.ANA\) Mappings](#)

[Event \(.EVT\) Mappings](#)

[Gas Volume \(.VOL\) Mappings](#)

 Note: There are several PGAS attributes for which there is no equivalent EFM Exporter configuration mapping.

Alarms (.ARM) Mappings

EFM Exporter Mapping	PGAS Attribute
Meter ID	METER_ID
When	ALARM_DATE
N/A	PRIORITY_LEVEL
{ type+state+data_type }	ALARM_TEXT

EFM Exporter Mapping	PGAS Attribute
N/A	TRIGGER_VALUE
N/A	ALARM_VALUE

Gas Quality (.ANA) Mappings

EFM Exporter Mapping	PGAS Attribute
Meter ID	ANALYSIS_ID
Sample Time	SAMPLE_DATE
N/A	EFFECTIVE_DATE
N/A	SAMPLE_TYPE
N/A	SAMPLE_ID
<element%>	METHANE_MOL
<element%>	ETHANE_MOL
<element%>	PROPANE_MOL
<element%>	IBUTANE_MOL
<element%>	NBUTANE_MOL
<element%>	IPENTANE_MOL
<element%>	NPENTANE_MOL
<element%>	NHEXANE_MOL
<element%>	NHEPTANE_MOL
<element%>	NOCTANE_MOL
<element%>	NNONANE_MOL
<element%>	NDECANE_MOL
<element%>	N2_MOL
<element%>	CO2_MOL
<element%>	H2O_MOL
<element%>	H2S_MOL
<element%>	H2_MOL
<element%>	CO_MOL
<element%>	O2_MOL
<element%>	HE_MOL
<element%>	AR_MOL
Specific Gravity	GRAVITY
Pressure Base	SAMPLE_PRESSURE_BASE
N/A	DRY_ENERGY_FACTOR
N/A	SAT_ENERGY_FACTOR
BTU	AS_DELIVERED_ENERGY_FACTOR
Average Pressure	SAMPLE_PRESSURE
Average Temperature	SAMPLE_TEMPERATURE
N/A	GENERIC1

EFM Exporter Mapping	PGAS Attribute
N/A	GENERIC2
N/A	GENERIC3
N/A	GENERIC4
N/A	GENERIC5
N/A	GENERIC6
N/A	GENERIC7
N/A	GENERIC8
N/A	LAB_CODE
N/A	ANALYZED_DATE
N/A	ANALYZER_OPERATOR
N/A	GENERIC9
N/A	GENERIC10
N/A	GENERIC11
N/A	GENERIC12
N/A	GENERIC13
N/A	GENERIC14
N/A	GENERIC15
N/A	GENERIC16
N/A	GENERIC17

Note: The PGAS Exporter attempts to use live gas Quality Control (GC) data for the MOL % gas quality fields. If live data is not available, the EFM Exporter uses the static GC data present in the configuration.

Event (.EVT) Mappings

The PGAS Exporter follows certain conventions to successfully convert configuration events from the EFM Exporter. For more information, refer to the table below.

EFM Exporter Mapping	PGAS Attribute
Meter ID	METER_ID
When	EVENT_DATE
*	METER_CALC_COLUMN_NAME
New Value**	NEW_VALUE
Old Value**	OLD_VALUE
*	PRIORITY_LEVEL*
Attribute Description**	DESCRIPTION
Event Description with values**	COMMENT

*For more information, refer to the table below.

**This column is populated as appropriate information is available.

Mapping .EVT "METER_CALC_COLUMN_NAME" to the PGAS Key Events

This column denotes a key event, which is a special type of event that PGAS is capable of natively understanding.

EFM Exporter Mapping	PGAS Attribute
Orifice Plate Size	ORIFICE_SIZE
Pipe Diameter	TUBE_DIAMETER
Temperature Base	TEMP_BASE
Pressure Base	CONTRACT_PRES_BASE
N/A	FPV_ENABLE_PRES
Atmospheric Pressure	SITE_ATMOS_PRES
Factor FR	NORMALIZE_FR_FACTOR
Factor FY	NORMALIZE_Y_FACTOR
Plate Material	PLATE_MATERIAL
Pipe Material	TUBE_MATERIAL
Meter Tap	DIFF_TAP_TYPE
Static Pressure Tap	STAT_TAP_LOCA
DP Calibration Range High	DIFF_HI_RANGE
SP Calibration High	STATIC_HI_RANGE
Temperature Calibration Range Low	TEMP_LO_RANGE
Temperature Calibration Range High	TEMP_HI_RANGE
N/A	ORIFICE_SERIAL_NUM
N/A	IN_SITU
N/A	STATION_STATUS
N/A	METER_STATUS
N/A	STATION_NAME
Meter ID	METER_NAME
N/A	STATION_PURPOSE
N/A	LOC_ADDRESS1
N/A	LOC_ADDRESS2
N/A	LOC_CITY
N/A	LOC_STATE
N/A	LOC_COUNTRY
N/A	LOC_ZIPCODE
N/A	LOC_DISTRICT
N/A	LOC_ELEVATION
N/A	LOC_LATITUDE
N/A	LOC_LONGITUDE
N/A	LOC_MAPCODE
N/A	DISCONNECT_DATE
N/A	INITIAL_FLOW_DATE
N/A	TEST_GROUP_BE
N/A	METER_SERIAL_NUM
N/A	METER_MAKE

EFM Exporter Mapping	PGAS Attribute
N/A	METER_MODEL
Meter Factor	METER_FACTOR
N/A	FIXED_FACTOR_FLAG
N/A	COMPENSATING_INDEX_FLAG
N/A	INDEX_NUMBER_OF_DIALS
N/A	METER_INSTALLATION_DATE
N/A	METER_PURCHASE_DATE
N/A	INDEX_INSTRUMENT_UNIT_OF_DIALS
N/A	EFM_SERIAL_NUMBER
N/A	EFM_MAKE
N/A	EFM_MODEL
N/A	INSTRUMENT_PURCHASE_DATE
N/A	INSTRUMENT_INSTALLATION_DATE

Gas Volume (.VOL) Mappings

EFM Exporter Mapping	PGAS Attribute
Meter ID	METER_ID
N/A	PRODUCTION_DATE_START
When	PRODUCTION_DATE_END
Flow Time	FLOW_TIME_MINUTES
Total Volume	EFM_VOLUME
Total Energy	EFM_ENERGY
Average Extension	FLOW_EXTN
Average Different Pressure	DIFF_PRESS
Average Pressure	STAT_PRESS
Average Temperature	FLOW_TEMP
Raw Volume	ROTARY_CURR_UNCO_VOL
N/A	ROTARY_PREV_UNCO_VOL
Pulses	ROTARY_AVG_FREQ
C Prime	C_PRIME
N/A	FA
N/A	FB
N/A	FG
N/A	FPB
N/A	FPM
N/A	FPV
N/A	FR
N/A	FTB
N/A	FTF

Wildcards

The file path and file name support both record and server wildcards. Record wildcards are replaced with data from the records. Sds.

Attribute Enumerations

Data Type Enumerations

EFM Event and Alarm records contain an enumerated data type attribute. The following table documents the alarm and event enumeration supported by the CSV and database exporters.

data_type	Value
None	0
Short	2
Long	3
Real	4
Double	5
String	8
Boolean	11
Char	16
Byte	17
Word	18
DWord	19

Configuration Attribute Enumerations

There are several EFM configuration properties that the EFM exporter represents as enumerated values. The following tables document the configuration enumerations supported by the gas CSV and database exporters.

meter_type	Value
Orifice	1
Positive Displacement	2
Turbine	3
Ultrasonic	4
Liquids	5
Vcone	6
Coriolis	7
Line Pack	8

live_analysis	Value
TRUE	1
FALSE	0

live_btu	Value
TRUE	1
FALSE	0

live_gravity	Value
TRUE	1
FALSE	0

live_temp	Value
TRUE	1
FALSE	0

calculation_method	Value
Aga3 1985	1
Aga3 1992	2
Aga5	3
Aga7	4
Vcone4	5
Aga11	6
Line Pack	7

meter_tap	Value
Flange	1
Pipe	2

static_pressure_tap	Value
Up	1
Down	2

unit	Value
English	1
Metric	2

hourly_record_span	Value
Leading	1
Trailing	2

btu_base	Value
Wet	1
Dry	2
As Delivered	3

factor_fa	Value
TRUE	1

factor_fa	Value
FALSE	0

factor_fb	Value
TRUE	1
FALSE	0

factor_fg	Value
TRUE	1
FALSE	0

factor_fpv	Value
TRUE	1
FALSE	0

factor_fr	Value
TRUE	1
FALSE	0

factor_ft	Value
TRUE	1
FALSE	0

factor_fwv	Value
TRUE	1
FALSE	0

pipe_material	Value
Stainless Steel	1
Carbon Steel	2
Monel	3

plate_material	Value
Stainless Steel	1
Carbon Steel	2
Monel	3

fpv_method	Value
Nx19	1
Aga8 Detail	2

fpv_method	Value
Aga8 Gross1	3
Aga8 Gross2	4

static_pressure_type	Value
Gauge	1
Absolute	2

unit_volume	Value
Million Cubic Meters	1
Thousand Cubic Meters	2
Hundred Cubic Meters	3
Cubic Meters	4
Million Cubic Feet	5
Thousand Cubic Feet	6
Hundred Cubic Feet	7
Cubic Feet	8

unit_k_factor	Value
Counts Per Million Cubic Meters	1
Counts Per Thousand Cubic Meters	2
Counts Per Hundred Cubic Meters	3
Counts Per Cubic Meter	4
Counts Per Million Cubic Feet	5
Counts Per Thousand Cubic Feet	6
Counts Per Hundred Cubic Feet	7
Counts Per Cubic Foot	8

Event Attribute Enumerations

The EFM exporter represents configuration change events by associating an event record with a configuration attribute. The following table documents the attribute enumerations supported by the CSV and database exporters.

● Note: If the attribute field is empty, then the event record contains a "new_value" string that describes the user event. These event types cannot be associated with a configuration attribute by an EFM driver.

Attribute	Value
Meter ID	0
Meter Type	1
Pressure Base	2
Temp Base	3
Live Analysis	4

EFM

A


L

L

L

C

Value

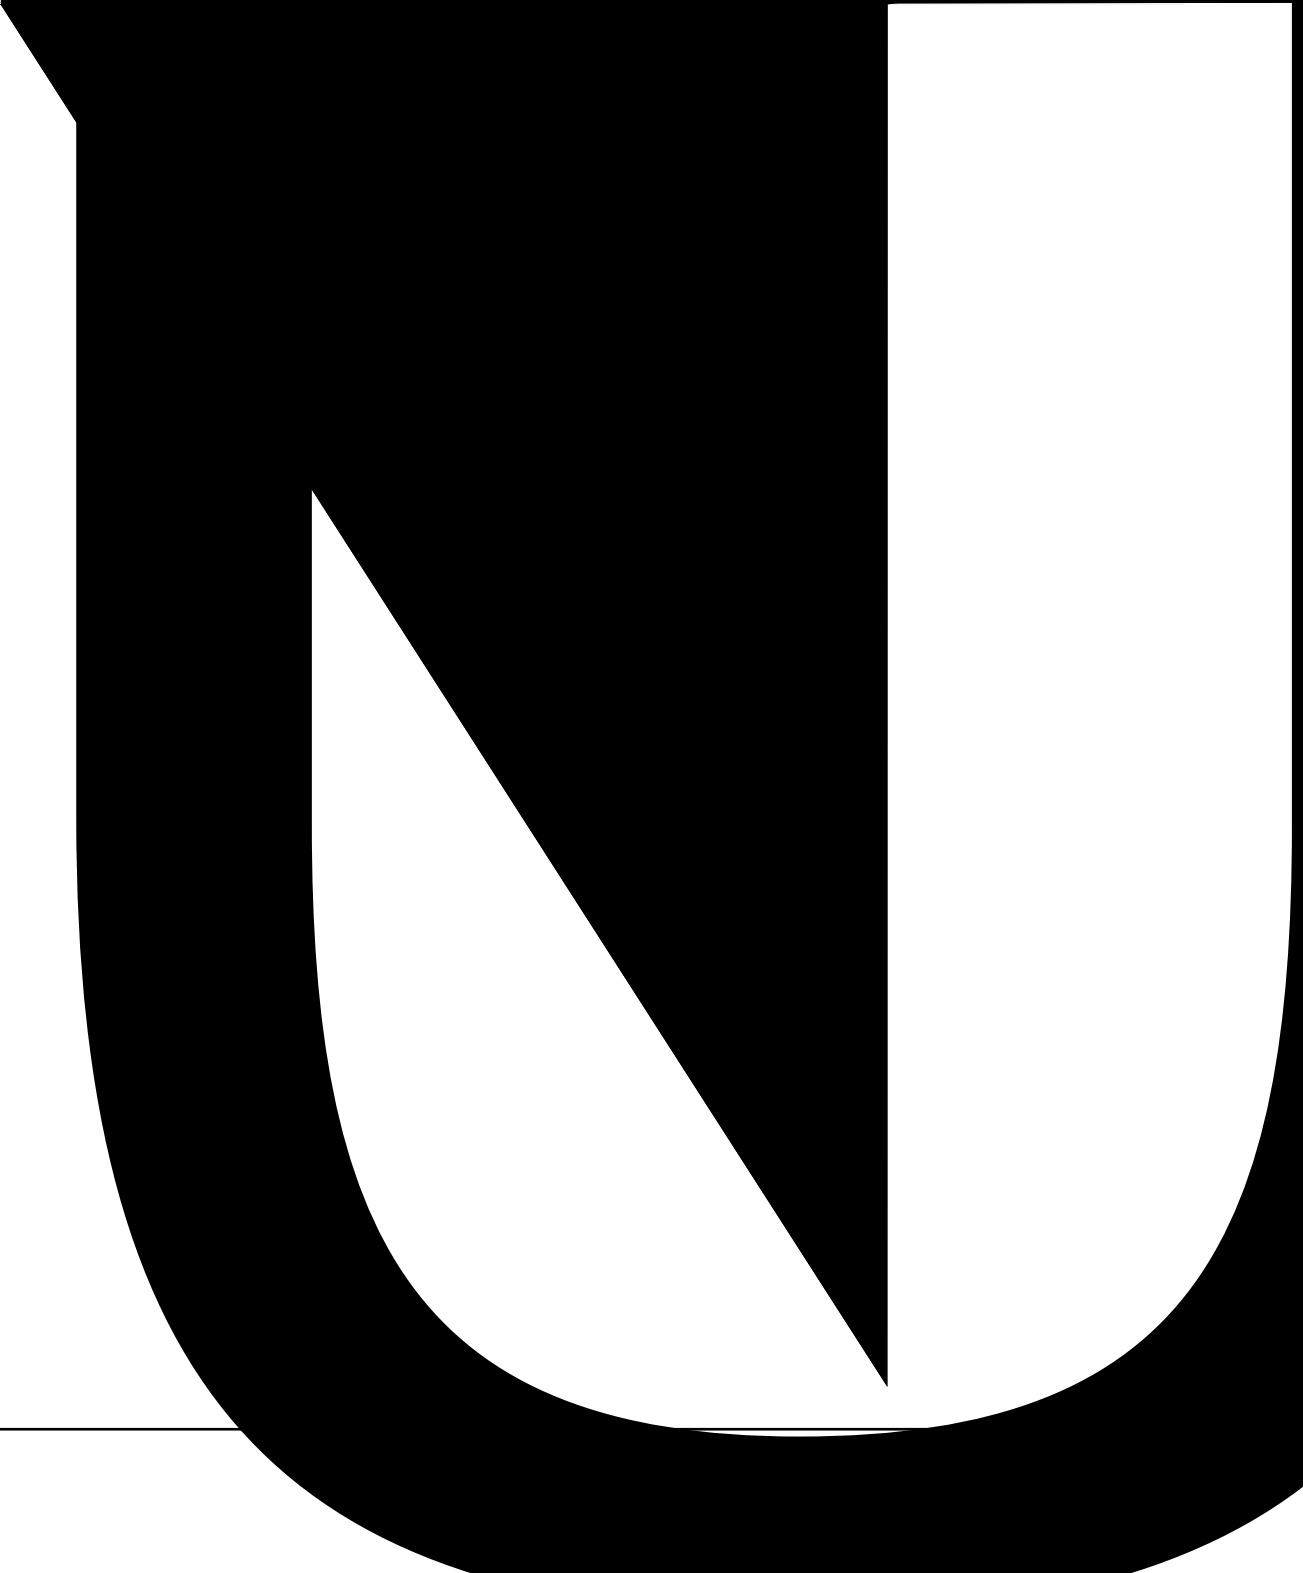

Attribute	Value
Contract Hour	44
Contract Day	45
Sample Time	46
Time Zone	47
DST	48
BTU Base	49
Factor FA	50
Factor FB	51
Factor FG	52
Factor FPV	53
Factor FR	54
Factor FT	55
Factor FWV	56
Factor FY	57
Fixed Factor	58
Pipe Material	59
Plate Material	60
FPV Method	61
Static Pressure Type	62
DP Calib Range High	63
DP Transd Range High	64
SP Calib High	65
SP Calib Low	66
SP Transd Range High	67
Temp Calib Range High	68
Temp Calib Range Low	69
Temp Transd Range High	70
Temp Transd Range Low	71
DP Low Alarm	72
DP Backflow Alarm	73
DP High Alarm	74
SP Low Alarm	75
SP High Alarm	76
Temp Low Alarm	77
Temp High Alarm	78
K Factor	79
Meter Factor	80
Accumulated Volume	81
Unit Volume	82

Attribute	Value
Unit K Factor	83
Specific Heats	85

Alarm Attribute Enumerations

There are several EFM alarm properties that the EFM Exporter represents as enumerated values. The following tables document the alarm enumerations supported by the CSV and database exporters.

Type	Value
Diff Pressure	1
Static Pressure	2
Temperature	3
Cutoff	4
Backflow	5
Battery	6

State	Value
Off	1
On	2
Hi	3
Lo	4

CSV Import / Export

The EFM Exporter supports the import and export of data in a Comma-Separated Variable (CSV) file. CSV import and export supports the efficient configuration of large numbers of poll groups, meters, and exporters. CSV functions are only available at the poll group object level. Properties that are not defined in the CSV file are assigned appropriate default values. For more information on a specific aspect of CSV Import / Export, select a link from the list below.

[Creating a Template](#)

[Exporting Poll Group Objects](#)

[Importing a CSV File into the Server](#)

[Using Other Characters as the Delimiter](#)

Creating a Template

The easiest way to create an import CSV file is to create a template. For more information, refer to the instructions below.

1. To start, create a poll Group. Specify the desired configuration and polling settings, and then click OK.
2. Right-click on Meters and select New Meter.
3. In Meter, click the browse icon to locate and select a meter. Then, click Apply | OK.
4. Right-click on Exporters and create a new exporter of choice. Once finished, click OK.
5. Right-click on

ExpoS

Exporter

ort

t

Configuration
Filename This is the name of the


Configuration
Root Directory This is the Config Output's file path.

Enabled This is the enabled state of the exporter. When disabled, the exporter does not generate CSV files. The

Column Name	Value
name	
Events Root Directory	This is the Events Output's file path.
Delimiter	This is the separator character used in writing. Valid options include comma and semi-colon. The default setting is comma.
History Daily Enabled	This is the enabled state of the Daily History Output. When disabled, the output does not poll. The default setting is true.
History Daily Filename	This is the name of the Daily History Output record. The default setting is "DailyHistory.csv".
History Daily Root Directory	This is the Daily History Output's file path.
History EFM Mapping	This is the EFM Mapping for the CSV exporter's History Output. It is read only and cannot be edited.
History Hourly Enabled	This is the enabled state of the Hourly History Output. When disabled, the output does not poll. The default setting is true.
History Hourly Filename	This is the name of the Hourly History Output record. The default setting is "HourlyHistory.csv".
History Hourly Root Directory	This is the Hourly History Output's file path.
Batch EFM Mapping	This is the EFM Mapping for the CSV Exporter's Batch Output. It is read only and cannot be edited. Only supported for liquid CSV data.
Batch Enabled	This is the enabled state of the batch Output. When disabled, the output does not poll. The default setting is true (enabled). Only supported for liquid CSV data.
Batch File Name	This is the name of the batch Output record for liquid CSV data. The default setting is "Batch.csv".
Batch Root Directory	This is the liquid CSV batch Output file path.
Liquid Product EFM Mapping	This is the EFM Mapping for the CSV exporter Liquid Product Output. It is read only and cannot be edited. Only supported for liquid CSV data.
Liquid Product Enabled	This is the enabled state of the Liquid Product Output. When disabled, the output does not poll. The default setting is true (enabled). Only supported for liquid CSV data.
Liquid Product File Name	This is the name of the Liquid Product Output record. The default setting is "LiquidProduct.csv". Only supported for liquid CSV data.
Liquid Product Root Directory	This is the Liquid Product Output CSV file path.
Name	This is the fully qualified name of the exporter. If the exporter name is not set by the user,

Column Name	Value
	the default setting is

Column Name	Value
	Device Time



Column Name	Value
Events Enabled	This is the enabled state of the Events Output. When disabled, the output does not poll. The default setting is true.
Events Table Generation Type	This is the Events Output's table type. Valid options include Log to an existing table and Create a new table once and always attempt to append to this table. The default setting is Create a new table once and always attempt to append to this table.
Events Table Name	This is the table name of the Events Output. The default setting is "efmgasevents" for gas and "efmliquidevents" for liquid.
Hourly History EFM Mapping	This is the EFM Mapping for the database exporter's Hourly History Output. It is read only and cannot be edited.
Hourly History Enabled	This is the enabled state of the Hourly History Output. When disabled, the output does not poll. The default setting is true.
Hourly History Table Generation Type	This is the Hourly History Output's table type. Valid options include Log to an existing table and Create a new table once and always attempt to append to this table. The default setting is Create a new table once and always attempt to append to this table.
Hourly History Table Name	This is the table name of the Hourly History Output. The default setting is "efm-gashourlyhistory" for gas and "efmliquidhourlyhistory" for liquid.
Batch EFM Mapping	This is the EFM Mapping for the database exporter's Batch Output. It is read only and cannot be edited. Only supported for liquid data.
Batch Enabled	This is the enabled state of the Batch Output. When disabled, the output does not poll. The default setting is true (enabled). Only supported for liquid data.
Batch Table Generation Type	This is the Batch Output table type. Valid options include Log to an existing table and Create a new table once and always attempt to append to this table (default). Only supported for liquid data.
Batch Table Name	This is the table name of the Batch Output. The default setting is "efmliquidBatch". Only supported for liquid data.
Liquid Product EFM Mapping	This is the EFM Mapping for the database exporter Liquid Product Output. It is read only and cannot be edited. Only supported for liquid data.
Liquid Product Enabled	This is the enabled state of the Liquid Product Output. When disabled, the output does not poll. The default setting is true (enabled). Only supported for liquid data.
Liquid Product Table Generation Type	This is the Liquid Product Output table type. Valid options include Log to an existing table and Create a new table once and always attempt to append to this table (default). Only supported for liquid database.
Liquid Product Table Name	This is the table name of the Liquid Product Output. The default setting is "efm-liquidproduct". Only supported for liquid data.
Login Timeout	This is how long the server waits for a response when attempting to connect to the DSN. The default setting is 5 seconds.
Name	This is the fully qualified name of the exporter. If the exporter name is not set by the user,

Column Name	Value
	the default setting is "Gas Meters.Exporters.GasDatabase" for gas and "Liquid Meters.Exporters.LiquidDatabase" for liquid.
Password	This is the password for the DSN. It is only necessary if the data source requires it.
Record Type	"Database"
Time Basis	This is the format of the EFM time records. Valid options include the following: Device Time UTC Local System Time The default setting is Device Time.
User Name	This is the user name for the DSN. It is only necessary if the data source requires it.


Importing a CSV File into the Server

Once the CSV file has been created and exported, it can be re-imported into the EFM Exporter by clicking File | Import CSV. This option is only available when a poll Group is selected.

Using Other Characters as the Delimiter

When utilizing a CSV file that does not use a comma or semi-colon delimiter, users should do one of the following:

- Save the project in .JSON, then perform mass configuration on the .JSON file instead of using CSV.
- Perform a search-and-replace on the delimiter in the CSV file and then replace the delimiter with a comma or semicolon. The delimiter being used by the OPC server (either comma or semicolon) must be set to the replacement character.

 For information on specifying which character to use as the variable (comma or semicolon), refer to "Options - General" in the server help file.

System Tags

Poll Group-Level System Tags

Syntax Example: `_EFMExporter.<PollGroup Name>._Enable`

Tag	Class	Description	Access
<code>_Enable</code>	Parameter	The <code>_Enable</code> tag allows the poll group and all child exporter and meter elements to be enabled and disabled. Disabling a poll group terminates polling its meters.	Read/Write
<code>_ErrorOnLastPoll</code>	Status	The <code>_ErrorOnLastPoll</code> tag is a Boolean tag that reports the status of the previous poll. If an error occurs during a poll, this tag reports TRUE. To obtain the start and end time of the failed poll, read the <code>_LastPollStart</code> and <code>_LastPollEnd</code> tags respectively.	Read Only
<code>_LastPollEnd</code>	Status	The <code>_LastPollEnd</code> tag reports the time that the last poll completed. All times are reported in UTC. If no poll has completed, the tag reports 01/01/1601 00:00:00.000.	Read Only
<code>_LastPollStart</code>	Status	The <code>_LastPollStart</code> tag reports the time that the last poll started. All times are reported in UTC. If no poll has started, the tag reports 01/01/1601 00:00:00.000.	Read Only
<code>_NextPollStart</code>	Status	The <code>_NextPollStart</code> tag reports the time that the next poll starts. All times are reported in UTC. If no next poll is scheduled, the tag reports 01/01/1601 00:00:00.000.	Read Only
<code>_Polling</code>	Status	The <code>_Polling</code> tag is a Boolean tag that reports TRUE whenever a poll is in progress and FALSE otherwise.	Read Only
<code>_Poll</code>	Parameter	The <code>_Poll</code> tag allows external clients to issue On Demand polls by writing a value to the tag.	Read/Write

Meter-Level System Tags

Example Syntax: `_EFMExporter.<Poll Group Name>.Gas Meters.<Meter Name>._Enable`

Tag	Class	Description	Access
<code>_Enable</code>	Parameter	The <code>_Enable</code> tag allows a meter to be enabled and disabled. Meters cannot be enabled while a parent element is disabled. Disabling a meter terminates polling of that meter within a poll group.	Read/Write
<code>_ErrorOnLastPoll</code>	Status	The <code>_ErrorOnLastPoll</code> tag is a Boolean tag that reports the status of the previous poll. If an error occurs during a poll, this tag reports TRUE.	Read Only
<code>_Polling</code>	Status	The <code>_Polling</code> tag is a Boolean tag that reports TRUE whenever a poll is in progress and FALSE otherwise. A poll is considered finished once its data has been exported.	Read Only
<code>_Poll</code>	Parameter	The <code>_Poll</code> tag allows external clients to issue On Demand polls by writing a value to the tag. Additionally, multiple meters can be polled simultaneously by writing to the <code>_Poll</code> tag.	Read/Write

Exporter-Level System Tags

Example Syntax: `_EFMExporter.<Poll Group Name>.Gas Meters.Exporters.<Exporter>._Enable`

Tag	Class	Description	Access
<code>_Enable</code>	Parameter	The <code>_Enable</code> tag allows an exporter to be enabled and disabled. Exporters cannot be enabled while a parent element is disabled. Disabling a meter terminates polling of that meter within a poll group.	Read/Write

EFM Channel and Device-Level System Tags

The system tags displayed in the table below are supported by all EFM drivers except the EFM Simulator Driver.

Example Syntax: `<Channel Name>._System._ResetEFMCache`

Example Syntax: `<Channel Name>.<Device Name>._System._ResetEFMCache`

Tag	Level	Description	Access
<code>_ResetEFMCache</code>			

Error Descriptions

The following classes of messages may be generated. Click on the link for a list of message in the selected category.

[General Error Messages](#)

[CSV Exporter Error Messages](#)

[CSV Import / Export Error Messages](#)

[Database Exporter Error Messages](#)

[Flow-Cal Exporter Error Messages](#)

[Flow-Cal Transaction Queue Exporter Error Messages](#)

[PGAS Exporter Error Messages](#)

General Error Messages

The following messages may be generated. Click on the link for a description of the message.

[Attribute look up for the meter_id failed for <meter name>. The |MeterID| wildcard is replaced with <Channel>_<Device>_<Meter>_NoMeterID.](#)

[<Error cause> may strand unexported data stored at <location>. Stranded data will not be exported. Please see help file for more details.](#)

[<Poll group> ended on demand poll at <time>.](#)

[<Poll group> ended poll at <time>. Next poll scheduled for <time>.](#)

[<Poll group> first poll scheduled for <time> local time.](#)

[<Poll group> overran the next scheduled poll at <time>. The next poll has been rescheduled for <time> local time.](#)

[<Poll group> starting on demand poll at <time>.](#)

[<Poll group> starting scheduled poll at <time>.](#)

[Error adding exporter <exporter name>: can't add gas exporters to liquid meters and can't add liquid exporters to gas meters.](#)

[Exporter <exporter> failed to append to the existing <file> file. A new file is being created. Data from the existing file will be deleted.](#)

[Exporter <exporter> failed to move meter data from temp directory <temp file> to <output file> \(reason: <reason>\). The data will stay in the temp directory, and an attempt will be made to move the file after the next poll.](#)

[Failed to add <EFM data that failed> data for meter <poll group name>.<meter type>.<channel name><device name><meter name>.](#)

[Failed to add meter <meter> to <poll group>. The meter already exists.](#)

[Failed to load data from <file name>. This data will not be available in future exports.](#)

[Failed to register meters for <poll group name>. Please verify the meter configuration is correct. Polling will not start until the problems are resolved.](#)

[Failed to remove temporary meter data file <file path>. Reason: Configuration change.](#)

[Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. The data is lost.](#)

[Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. Reason: Failed to update temporary data store file \(unknown\).](#)

<Error cause> may strand unexported data stored at <Location>. Stranded data will not be exported. Please see help file for more details.

Error Type:

Warning

Source:

Runtime

Possible Cause:

An attempt was made to change the configuration when data had not been successfully exported. Making the configuration change indicated in the error forced the temporary unexported data to be stranded.

Solution:

1. Revert the configuration change indicated in the error.
2. Successfully export the data before re-attempting the configuration change.

<Poll group> ended on demand poll at <time>.

Error Type:

Information

Source:

Runtime

Possible Cause:

An on demand poll that was triggered by a write to the poll group's poll tag has completed.

Solution:

N/A

<Poll group> ended poll at <time>. Next poll scheduled for <time>.

Error Type:

Information

Source:

Runtime

Possible Cause:

A poll has completed and the next poll has been scheduled.

Solution:

N/A

<Poll group> first poll scheduled for <time> local time.

Error Type:

Information

Source:

Runtime

Possible Cause:

A poll group just started and scheduled its first poll.

Solution:

N/A

<Poll group> overran the next scheduled poll at <time>. The next poll has been rescheduled for <time> local time.

Error Type:

Warning

Source:

Runtime

Possible Cause:

The poll took longer to complete than the interval specified in the poll rate.

Solution:

1. Check the poll rate to ensure that data is being requested at a reasonable rate.
2. Check for issues with communications.
3. Ensure that there are not too many meters beneath the poll group. If so, separate the meters among several poll groups.

<Poll group> starting on demand poll at <time>.

Error Type:

Information

Source:

Runtime

Possible Cause:

An on demand poll was triggered by a write to the poll group's poll tag.

Solution:

N/A

<Poll group> starting scheduled poll at <time>.

Error Type:

Information

Source:

Runtime

Possible Cause:

The meters are starting to be polled for EFM data.

Solution:

N/A

Error adding exporter <exporter name>: can't add gas exporters to liquid meters and can't add liquid exporters to gas meters.

Error Type:

Serious

Possible Cause:

The specified exporter type does not match the meter type.

Solution:

Verify only gas exporters are added to gas meters, and only liquid exporters are added to liquid meters.

Exporter <exporter> failed to append to the existing <file> file. A new file is being created. Data from the existing file will be deleted.

Error Type:

Error

Source:

Runtime

Possible Cause:

The exporter failed to read a file that was previously exported to append new data. The file may have been deleted.

Solution:

Ensure that the file path has proper access permissions, and may be read from by the server.

Exporter <exporter> failed to move meter data from temp directory <temp file> to <output file> (reason: <reason>). The data will stay in the temp directory, and an attempt will be made to move the file after the next poll.

2. The output path does not have proper access permissions.
3. There is not enough disk storage.

Solution:

1. Ensure that the server can access the output path.
2. Ensure that the output path has the proper access permissions to allow the server to create and write to files.
3. Ensure that there is enough disk space to move the file.

Failed to add <EFM data that failed> data for meter <poll group name>.<-meter type>.<channel name><device name><meter name>.

Error Type:

Error

Source:

Runtime

Possible Cause:

Data export has been disabled for the meter.

Solution:

Ensure that data export is enabled in the meter.

See Also:

[Meter](#)

Failed to add meter <meter> to <poll group>. The meter already exists.

Error Type:

Error

Source:

Configuration

Possible Cause:

An attempt was made to add a meter to a poll group that was already in the poll group.

Solution:

N/A

Failed to load data from <file name>. This data will not be available in future exports.

Error Type:

Warning

Source:

Runtime

Possible Cause:

Flow-Cal EFM data could not be loaded from the specified file during data Store Conversion because the data is corrupt or inaccessible. Data that cannot be converted is not included in future exports.

Solution:

Ensure that permissions have been set correctly for the directory.

Failed to register meters for <poll group name>. Please verify the meter configuration is correct. Polling will not start until the problems are resolved.

Error Type:

Error

Source:

Runtime

Possible Cause:

1. The meter configuration is incorrect, and does not reflect the changes that were recently made to the device.
2. The driver is configured to upload either hourly or daily EFM historical data, but the EFM Exporter is not configured to export that type.
3. Data collection has been disabled for the device.

Solution:

1. Fix the configuration by browsing to the meter or by deleting the offending meter.
2. Ensure that the driver and the EFM Exporter are configured to export the same type of EFM historical data.
3. Ensure that the device's Enable data collection option is checked.

 For more information, refer to "Device Properties - General" in the server help file.

Failed to remove temporary meter data file <file path>. Reason: Configuration change.

Error Type:

Warning

Source:

Runtime

Possible Cause:

The configuration was changed before the output data was consumed.

Solution:

The data is cached in the specified path.

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. The data is lost.

Error Type:

Error

Source:

Runtime

Possible Cause:

1. The exporter file (such as a CFX file) failed to save to a temporary location. This may be due to access permission issues or limited disk storage.
2. The path name exceeded the length that is allowed by the host system.

Solution:

1. Ensure that the files can be created and written to the file path by the server. Also, ensure that the disk has enough space to store the file.
2. Shorten the channel name, device name, meter name, exporter name, and/or the exporter's path name.

Note:

The Service and Interactive server modes have different permissions.

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. Reason: Failed to update temporary data store file (unknown).

Error Type:

Error

Source:

Runtime

Possible Cause:

Unsupported characters for the EFM Exporter are being used in the configuration.

Examples of characters that are not supported:

/, @, *, <, >, |, and .:

Solution:

Using the View Selector, navigate to the Channels/Devices view. Remove unsupported characters from the names of any channels, devices and meters in the project.

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. Reason: Failed to reset data store file (unknown).

Error Type:

Error

Source:

Runtime

Possible Cause:

1. Unsupported characters for the EFM Exporter are being used in the configuration.
Examples of characters that are not supported:
/, @, *, <, >, |, and :.
2. The path name exceeded the length that is allowed by the host system.

Solution:

1. Using the View Selector, navigate to the Channels/Devices view. Remove unsupported characters from the names of any channels, devices and meters in the project.
2. Shorten the channel name, device name, meter name, exporter name, and /or the exporter's path name.

● Using wildcards can cause the file path to be excessively long.

Flow-Cal EFM data cached from the previously installed version is being converted. All EFM polls will be postponed until the conversion is complete.

Error Type:

Information

Source:

Runtime

Possible Cause:

An application upgrade requires that the Flow-Cal EFM data store be updated for compatibility with the latest version.

Solution:

N/A

● Note:

The backup location of the legacy Flow-Cal data store is posted when the conversion completes. When performing a downgrade, users can restore the backup EFM files by renaming the backup file directory from "_EFMBackup" to "_EFM". The backup files are always stored in the server's Application data Folder, which is configured during installation.

Flow-Cal EFM data conversion complete. Legacy cached Flow-Cal EFM files have been moved to <backup directory>.

Error Type:

Information

Source:

Runtime

Possible Cause:

An application upgrade requires that the Flow-Cal EFM data store be updated for compatibility with the latest version. Before conversion, a backup is made and deposited in the specified location. The backup location is specified when a backup is made.

Solution:

N/A

Flow-Cal EFM data conversion failed. <Extended Error>. Exported data will not include previously cached data.

Error Type:

Warning

Source:

Runtime

Possible Cause:

The extended error indicates the cause of the error. When conversion fails, any data that was not previously exported by the EFM Exporter is not be available in future exports.

Solution:

1. Ensure that there is sufficient disk space.
2. Ensure that permissions have been set correctly for the directory.

Ignoring enable for <exporter>. The exporter group <exporter group> is disabled.

Error Type:

Error

Source:

Runtime

Possible Cause:

A client wrote to the exporter's _Enable tag to enable it, but the exporter group was disabled.

Solution:

Enable the exporter group.

Ignoring enable for <meter>. The meter group <meter group> is disabled.

Error Type:

Error

Source:

Runtime

Possible Cause:

A client wrote to the meter's _Enable tag to enable it, but the meter group was disabled.

Solution:

Enable the meter group.

Ignoring on demand poll request for <meter>. A poll for this meter is already queued.

Error Type:

Error

Source:

Runtime

Possible Cause:

A client wrote the meter's _Poll tag when the meter was already queued for a poll. This can occur when the poll tag is written during a scheduled poll or a poll group demand poll.

Solution:

Ensure the client does not attempt to poll a meter twice.

Ignoring on demand poll request for <meter>. The meter is disabled.

Error Type:

Error

Source:

Runtime

Possible Cause:

A client wrote to the meter's _Poll tag while the meter was disabled.

Solution:

Enable the meter to allow polling, poll a different meter, or wait to poll when the meter is enabled.

Ignoring on demand poll request for <meter>. The meter's group must have at least one enabled exporter and the meter must be licensed.

Error Type:

Warning

Source:

Runtime

Possible Cause:

1. Although an on-demand poll was triggered via the meter's poll tag, there are no enabled exporters currently configured.
2. The meter is unlicensed.

Solution:

1. Add or enable meters and/or exporters to the poll group.
2. Verify the license level is adequate for the configured meters. Upgrade the license level or remove meters so that licensed device limit is not exceeded.

● Note: A count-based license evaluates the unique devices associated with any meters configured in the EFM Exporter (see [Licensing the EFM Exporter](#)).

Ignoring on demand poll request for <poll group>. A poll is already in progress.

Error Type:

Warning

Source:

Runtime

Possible Cause:

An on demand poll was triggered via the poll group's poll tag while a poll was already in progress. The on demand poll is ignored.

Solution:

N/A

Ignoring on demand poll request for <poll group>. The group has not initialized yet, or one of the meters or exporters is incorrectly configured.

Error Type:

Warning

Source:

Runtime

Possible Cause:

1. There is an error in the poll group, meter, or exporter configuration that is causing the on demand polls to fail.
2. Data export has been disabled for the meter.

Solution:

1. Check the Event Log for other messages that indicate the cause of the configuration failure. Then, correct the problem.

2. Ensure that data export is enabled in the meter.

• See Also: [Meter](#)

Ignoring on demand poll request for <poll group>. The group is disabled.

Error Type:

Error

Source:

Runtime

Possible Cause:

A client wrote to the poll group's poll tag to trigger a poll, but the poll group is disabled.

Solution:

Enable the poll group.

Ignoring on demand poll request for <poll group>. The group must have at least one enabled exporter and at least one enabled and licensed meter.

Error Type:

Warning

Source:

Runtime

Possible Cause:

Although an on-demand poll was triggered via the poll group's poll tag, there are no enabled and licensed meters or enabled exporters currently configured.

Solution:

1. Add or enable meters and/or exporters to the poll group.
2. Verify the license level is adequate for the configured meters. Upgrade the license level or remove meters so that licensed device limit is not exceeded.

• Note: A count-based license evaluates the unique devices associated with any meters configured in the EFM Exporter (see [Licensing the EFM Exporter](#)).

Possible Cause:

This can occur when loading a file generated prior to version 6.2 or importing old CSV data. There are new restrictions for the names of mapping objects:

- They must be less than 256 characters.
- There can be no duplicate names.
- They cannot contain the characters ' ' or ' . '.
- CSV Exporters Only - They cannot contain delimiters, ';' and ', '.

Solution:

The mappings have been automatically renamed and exported with the new names. Consumers of those exports need to be updated to work with the new standards.

Meter <Meter> returned bad quality EFM data. This EFM data will not be included in the output.

Error Type:

Error

Source:

Runtime

Possible Cause:

1. Communications failed with the device.
2. The meter did not provide valid configuration data.
3. Data collection has been disabled for the device.
4. The meter is invalid. The configuration has changed so that a meter in the EFM Exporter has no corresponding valid meter in the Channels/Devices view.

Solution:

1. Check the Event Log to see whether the driver has posted any errors or warnings.
2. Check the configuration mapping for the driver, if applicable, and how the meter is setup with its programming software.
3. Ensure that the Data Collection property is enabled.
4. Once all the mis-configured meter(s) are known, re-browse for the meters in the EFM Exporter and/or re-enter the valid meters in the EFM Exporter. Alternatively, re-initialize the server and look for errors in the event log for messages concerning mis-configured meters.

Meter <Meter> returned bad quality EFM data for [<EFM data that failed>]. This EFM data will not be included in the output.

Error Type:

Error

Source:

Runtime

Possible Cause:

1. Communications failed with the device.
2. Data collection has been disabled for the device.
3. The device returned bad quality EFM data and is not exported (although the good quality EFM data was exported).
4. The meter in the EFM Exporter is invalid. The configuration has changed so that a meter in the EFM Exporter has no corresponding valid meter in the Channels/Devices view.
5. If the EFM data that failed was Configuration, ie: Meter <Meter> returned bad quality EFM data for ['Configuration']. This means attributes in the Configuration read are mis-configured.

Solution:

1. Check the Event Log to see whether the driver has posted any errors or warnings.
2. Ensure that the Data Collection property is enabled.
3. Check the configuration for the EFM data that failed. These are the six possible EFM types that can have configuration problems: Configuration, Hourly, Daily, Alarms, Events and Batch. The problem for the failed EFM data type could be the configuration in the OPC server or in the physical device itself.
4. Once all the mis-configured meter(s) are known, re-browse for the meters in the EFM Exporter and/or re-enter the valid meters in the EFM Exporter. Alternatively, re-initialize the server and look for errors in the event log for messages concerning mis-configured meters.
5. Verify that all reads in the Configuration record are valid, paying special attention to any enumerations in the Configuration. The value returned by the device must match a value in an enumeration from the Configuration.

No new data for meter <meter> exporter <exporter>.

Error Type:

Information

Source:

Runtime

Possible Cause:

1. A poll completed for the meter, but no new record-based data (such as History, Alarm, or Event) was collected. Nothing was exported for the meter.
2. A poll completed for the meter, but no exporter was configured to consume the collected data. For example, this would occur if Hourly History data was collected but there are only exporters configured to consume Daily History.

3. The EFM data for the specified meter contains data from records that are shared between multiple meters. Although the data was uploaded from the device, it could be consumed by the EFM Exporter.

Solution:

1. Check the poll group's poll rate, and ensure that the meter is not being polled too quickly (and that it can store new data).
 2. Ensure that the meter has an exporter configured to consume the data.
 3. Enable the clear cache option in the device that contains the specified meter. For more information on clearing cached data, refer to the driver's help
-

Possible Cause:

The reading of the meter's configuration data failed. Configuration data is required.

Solutions:

Check the Event Log to see whether the driver has posted any error messages.

Failed to save EFM data for exporter <exporter> to file <CSV file> (reason: <reason>). The operation will be reattempted on the next poll.

Error Type:

Error

Source:

Runtime

Possible Cause:

Changes were made to the CSV exporter's configuration. The .CSV file on disk has a different column configuration than the .CSV file being exported.

Solution:

Remove the existing .CSV files from the export directory. Then, attempt another poll.

Note:

The number of columns contained in a file that exists in the export directory must match the number of columns in the records that are being exported.

CSV Import / Export Error Messages

The following messages may be generated. Click on the link for a description of the message.

[Error importing CSV data. Invalid exporter group path: <path>.](#)

[Error importing CSV data. Invalid meter group name: <meter group>.](#)

[Error importing CSV data. No records found in CSV file.](#)

[Error importing CSV tag data. Field buffer overflow reading identification record.](#)

[Error importing CSV tag data. Unrecognized field name: <field name>.](#)

[Error importing tag database. Duplicate field name: <field name>.](#)

[Error importing tag database. Missing tag field identification record.](#)

Error importing CSV data. Invalid exporter group path: <path>.

Error Type:

Error

Source:

Configuration

Possible Cause:

The path to the exporter group is invalid or not in the Name field.

Solutions:

Ensure that the path is correct. The path should have the format, "<meter group>.Exporters.<exporter name>".

Error importing CSV data. Invalid meter group name: <meter group>.**Error Type:**

Error

Source:

Configuration

Possible Cause:

The meter group name is invalid or not in the Name field.

Solutions:

Ensure that the meter group name is correct. The path should have the format: <meter group name>.Exporters.<exporter name>.

Error importing CSV data. No records found in CSV file.**Error Type:**

Error

Source:

Configuration

Possible Cause:

There are no records in the CSV file.

Solutions:

Ensure that the CSV file has at least one valid record or add one.

Error importing CSV tag data. Field buffer overflow reading identification record.**Error Type:**

Error

Source:

Configuration

Possible Cause:

One of the field values contains too many characters.

Solutions:

Reduce the number of characters in the CSV field values.

Error importing CSV tag data. Unrecognized field name: <field name>.

Error Type:

Error

Source:

Configuration

Possible Cause:

One of the fields in the CSV record header is invalid.

Solutions:

Ensure that the CSV record headers are valid. Make corrections as necessary.

Error importing tag database. Duplicate field name: <field name>.

Error Type:

Error

Source:

Configuration

Possible Cause:

One of the fields in the CSV record header is duplicated.

Solutions:

Remove the duplicate field name from the CSV header.

Error importing tag database. Missing tag field identification record.

Error Type:

Error

Source:

Configuration

Possible Cause:

The tag field identification record is missing.

Solutions:

Replace or add the tag field identification record.

Database Exporter Error Messages

The following messages may be generated. Click on the link for a description of the message.

[Cannot connect to DSN <DSN name> - unable to connect to data source \(Memory Exception\).](#)

[Cannot connect to DSN <DSN name> - unable to connect to data source \(Reason: <reason>\).](#)

Creation of at least one TIMESTAMP column for table <table name> has been requested.

This has been adjusted to the MS-SQL required DATETIME.

Error importing CSV tag record <record number>: login timeout of <value> is out of range. Login timeout set to <value>.

Error importing CSV tag record <record number>: table generation type <type> is not supported. Table generation type set to <type>.

Failed to create table <table name> for unknown reason. SQL query: <query>.

Failed to create table <table name> on DSN <DSN name>. (Reason: <reason>).

Failed to create the data table <table name> - <reason> SQL query: <query>.

Failed to create the data table <table name> (Memory Exception). SQL query: <query>.

Failed to validate table <table name>. (Reason: The configured column name <column name> could not be found).

Table generation is not supported for ODBC driver.

Table validation failed. The table does not exist.

The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions.

Unable to open recordset on table <table name> (Memory Exception).

Unable to open recordset on table <table name> (Reason: <reason>).

Unable to retrieve column names on table <table name> because the table does not exist.

Unable to retrieve table column names on table <table name> (Reason: <reason>).

Unable to retrieve table name.

Unable to retrieve table name (Reason <reason>).

Unable to validate

Cannot connect to DSN <DSN name> - unable to connect to data source
(Reason: <reason>).

Error Type:

Serious

Possible Cause:

The database exporter could not connect to the specified data source due to the reason specified by the ODBC Driver.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Creation of at least one TIMESTAMP column for table <table name> has
been requested. This has been adjusted to the MS-SQL required DATETIME.

Error Type:

Warning

Possible Cause:

The DSN type is Microsoft SQL, which does not support this use of the TIMESTAMP type.

Solution:

The database exporter converts the TIMESTAMP columns to DATETIME columns when creating tables.
Users should only map DATETIME columns when using the Microsoft SQL server.

Error importing CSV tag record <record number>: login timeout of <value>
is out of range. Login timeout set to <value>.

Error Type:

Warning

Possible Cause:

The specified CSV file record uses a Login Timeout that is out of range.

Solution:

Use a Login Timeout within the valid range of 1 to 99999 seconds.

Error importing CSV tag record <record number>: table generation type
<type> is not supported. Table generation type set to <type>.

Error Type:

Warning

Possible Cause:

The specified CSV file record uses a table generation type that is not supported by the database exporter.

Solution:

Use a table generation type that is supported by the database exporter, such as "AutoGenerateOnce" or
"UseExisting."

Failed to create table <table name> for unknown reason. SQL query:
<query>.

Error Type:

Serious

Possible Cause:

The database exporter could not create the specified table for unknown reasons.

Solution:

The SQL query string is provided for diagnostic reasons. For more information, refer to the ODBC Driver's help documentation.

Failed to create table <table name> on DSN <DSN name>. (Reason:
<reason>).

Error Type:

Serious

Possible Cause:

The database exporter could not create the specified table due to the reason specified by the ODBC Driver.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Failed to create the data table <table name> - <reason> SQL query:
<query>.

Error Type:

Serious

Possible Cause:

The database exporter could not create the specified table due to the reason specified by the ODBC Driver.

Solution:

The SQL query string is provided for diagnostic reasons. For more information, refer to the ODBC Driver's help documentation.

Failed to create the data table <table name> (Memory Exception). SQL
query: <query>.

Error Type:

Serious

Possible Cause:

The database exporter could not create the specified table because the ODBC Driver encountered a memory exception while opening the table.

Solution:

1. The SQL query string is provided for diagnostic reasons. For more information, refer to the ODBC Driver's help documentation.
2. If the database is on a remote computer, double-check the user permissions and then verify that the network connection is active.

Failed to validate table <table name>. (Reason: The configured column name <column name> could not be found).

Error Type:

Serious

Possible Cause:

The database exporter is unable to validate the table because the specified column name could not be found.

Solution:

Verify that the specified column name exists in the table.

Table generation is not supported for ODBC driver.

Error Type:

Serious

Possible Cause:

The specified DSN does not use a supported ODBC driver.

Solution:

Specify a DSN that uses a supported ODBC driver.

 For more information on supported DSNs, refer to [Configure DSN](#).

Table validation failed. The table does not exist.

Error Type:

Serious

Possible Cause:

The table specified in the database exporter does not exist.

Solution:

Verify that the tables specified in the database exporter's configuration exist in the DSN.

The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions.

Error Type:

Serious

Possible Cause:

The database exporter could not perform a transaction because the data source is not appendable.

Solution:

Use the database software to verify that the user has append permissions on the specified table.

Unable to open recordset on table <table name> (Memory Exception).

Error Type:

Serious

Possible Cause:

The database exporter could not open the recordset on the specified table because the ODBC Driver encountered a memory exception while opening the table.

Solution:

If the database is on a remote computer, double-check the user permissions and then verify that the network connection is active.

Unable to open recordset on table <table name> (Reason: <reason>).

Error Type:

Serious

Possible Cause:

The database exporter could not open the recordset on the specified table due to the reason specified by the ODBC Driver.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Unable to retrieve column names on table <table name> because the table does not exist.

Error Type:

Serious

Possible Cause:

The database exporter is unable to retrieve the column names from the DSN because the table does not exist.

Solution:

Verify that the specified table exists in the DSN.

Unable to retrieve table column names on table <table name> (Reason: <reason>).

Error Type:

Serious

Possible Cause:

The database exporter is unable to retrieve the column names from the DSN due to the reason specified by the ODBC Driver.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Unable to retrieve table names.

Error Type:

Serious

Possible Cause:

The database exporter is unable to retrieve the table names from the DSN.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Unable to retrieve table names (Reason: <reason>).

Error Type:

Serious

Possible Cause:

The database exporter is unable to retrieve the table names from the DSN due to the reason specified by the ODBC Driver.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Unable to validate table <table name> (Memory Exception).

Error Type:

Serious

Possible Cause:

The database exporter is unable to validate the specified table because the ODBC Driver encountered a memory exception while opening the table.

Solution:

If the database is on a remote computer, double-check the user permissions and then verify that the network connection is active.

Unable to validate table <table name> (Reason: <reason>).

Error Type:

Serious

Possible Cause:

The database exporter is unable to validate the specified table due to the reason specified by the ODBC Driver.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Unknown error opening recordset on table <table name>.

Error Type:

Serious

Possible Cause:

The database exporter could not open the recordset on the specified table for an unknown reason.

Solution:

Verify the DSN settings and then consult the ODBC Driver's help documentation.

Flow-Cal Exporter Error Messages

The following messages may be generated. Click on the link for a description of the message.

[Flow-Cal exporter <exporter> failed to output data for meter <meter>. The meter did not provide valid configuration data. <Exporter name> is incompatible with the meter group type. Setting the history type to <default history type>.](#)

[The exporter <exporter name> is incompatible with the meter group type. The exporter configuration will not be loaded. <Exporter name> is incompatible with the meter group type. Setting the history type to <default history type>.](#)

[The history type <history type> for Flow-Cal Exporter <exporter name> is incompatible with the meter group type. Setting the history type to <default history type>.](#)

Flow-Cal exporter <exporter> failed to output data for meter <meter>. The meter did not provide valid configuration data.

Error Type:

Error

Source:

Runtime

Possible Cause:

The reading of the meter's configuration data failed. Configuration data is required.

Solutions:

Check the Event Log to see whether the driver has posted any error messages.

The exporter <exporter name> is incompatible with the meter group type. The exporter configuration will not be loaded.

Error Type:

Warning

Source:

Configuration

Possible Cause:

The .JSON file contains an exporter configuration that is not valid for the specified meter group.

Solution:

Verify that the .JSON gas meters or liquid meters groups only contain valid exporters.

The history type <history type> for Flow-Cal exporter <exporter name> is incompatible with the meter group type. Setting the history type to <default history type>.

Error Type:

Warning

Source:

Configuration

Possible Cause:

The .JSON project file contains a History Type that is not valid for the meter group. For example, an exporter in the gas meters group is configured with a History Type of Type 13.

Solution:

Update the .JSON file to include a valid History Type.

Flow-Cal Transaction Queue Exporter Error Messages

The following messages may be generated. Click on the link for a description of the message.

[Cannot connect to DSN <DSN name> - 'unable to connect to data source \(Memory Exception\).'](#)

[Cannot connect to DSN <DSN name> - 'unable to connect to data source \(Reason: <reason>\).'](#)

[Failed to validate table <table name>. \(Reason: The configured column name <column name> could not be found\).](#)

[Flow-Cal TXQ exporter <exporter name> failed to output data. The specified DSN <DSN name> is not an Oracle DSN.](#)

[Table validation failed. The table does not exist.](#)

[The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions.](#)

[Error writing data to DSN <DSN name>, table <table name> \(Memory Exception\).](#)

[Error writing data to DSN <DSN name>, table <table name> \(Reason: <reason>\).](#)

Cannot connect to DSN <DSN name> - unable to connect to data source (Memory Exception).

Error Type:

Serious

Possible Cause:

The Flow-Cal Transaction Queue Exporter could not connect to the specified data source because the ODBC driver encountered a memory exception opening the table.

Solution:

If the database is on a remote computer, check the user permissions and verify that the network connection is active.

Cannot connect to DSN <DSN name> - unable to connect to data source (Reason: <reason>).

Error Type:

Serious

Possible Cause:

The Flow-Cal Transaction Queue Exporter could not connect to the specified data source for the reason specified by the ODBC driver.

Solution:

Verify the DSN settings and consult the ODBC driver help documentation.

Failed to validate table <table name>. (Reason: The configured column name <column name> could not be found).

Error Type:

Serious

Possible Cause:

The Flow-Cal Transaction Queue Exporter is unable to validate the table because the specified column name cannot be found.

Solution:

Verify that the specified column name exists in the table or correct and try again.

Flow-Cal TXQ exporter <exporter name> failed to output data. The specified DSN <DSN name> is not an Oracle DSN.

Error Type:

Serious

Possible Cause:

The specified DSN is not a valid Oracle DSN.

Solution:

Verify that the exporter is configured to use an Oracle DSN or change the DSN to be a valid Oracle DSN.

Table validation failed. The table does not exist.

Error Type:

Serious

Possible Cause:

A table required by the Flow-Cal Transaction Queue Exporter does not exist.

Solution:

Verify that the tables required by the Flow-Cal Transaction Queue Exporter exist in the DSN. Contact the Flow-Cal Transaction Queue administrator for more information.

The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions.

Error Type:

Serious

Possible Cause:

The Flow-Cal Transaction Queue Exporter could not perform a transaction because the data source cannot be appended.

Solution:

Contact your Flow-Cal Transaction Queue administrator to verify that the user has permission to append to the specified table.

Error writing data to DSN <DSN name>, table <table name> (Memory Exception).

Error Type:

Serious

Possible Cause:

The Flow-Cal Transaction Queue Exporter could not open the record set on the specified table because the ODBC driver encountered a memory exception while opening the table.

Solution:

Contact the Flow-Cal Transaction Queue administrator to check the user permissions and, if the database is on a remote computer, verify that the network connection is active.

Error writing data to DSN <DSN name>, table <table name> (Reason: <reason>).

Error Type:

Serious

Possible Cause:

The Flow-Cal Transaction Queue Exporter could not open the record set on the specified table due to the reason specified by the ODBC driver.

Solution:

Verify the DSN settings and consult the ODBC driver help documentation or the Flow-Cal Transaction Queue administrator.

PGAS Exporter Error Messages

The following messages may be generated. Click on the link for a description of the message.

PGAS Exporter Error Messages

[PGAS Exporter <exporter> failed to output data for meter <meter>. The meter did not provide valid configuration data](#)

PGAS Exporter <Exporter> failed to output data for meter <meter>. The meter did not provide valid configuration data.

Error Type:

Error

Source:

Runtime

Possible Cause:

The reading of the meter's configuration data failed. Configuration data is required.

Solutions:

Check the Event Log to see whether the driver has posted any error messages.

Index

A

Absolute 44

AGA 27

AGA8 27

Alarm Data Type 19, 25

Alarm Field Mappings 19, 24

Alarm State 19, 25

Alarm Type 19, 25

Alarms 14

Alarms (.ARM) Mappings 33

Analysis 27

Analytics 33

ANSI 17

Attribute Enumerations 41

Attribute look up for the meter_id failed for <meter name>. The | MeterID| wildcard is replaced with <Channel>_<Device>_<Meter>_NoMeterID. 59

B

Batch 48

Boolean 41

BTU 45

Byte 41

C

Cached EFM Data 8

Calculation Method 18, 23

Cannot connect to DSN <DSN name> - unable to connect to data source (Memory Exception) 77

Cannot connect to DSN <DSN name> - unable to connect to data source (Memory Exception). 85

Cannot connect to DSN <DSN name> - unable to connect to data source (Reason <reason>). 85

Cannot connect to DSN <DSN name> - unable to connect to data source (Reason: <reason>) 78

Carbon Steel 43

CFX 27

CFX File Version 27
Char 41
Character Encoding 16, 50
Chromatographs 27
Configuration Field Mappings 17, 23
Configure DSN 22, 30
Coriolis 41
Creation of at least one TIMESTAMP column for table <table name> has been requested. This has been adjusted to the MS-SQL required DATETIME 78
CSV Exporter 16
CSV Exporter <Exporter> failed to output data for meter <Meter>. The meter did not provide valid configuration data 73
CSV Exporter Error Messages 73
CSV Import /Export Error Messages 74
CSV Import/Export 48

D

Data Source 21-22, 29, 31
Database Exporter 21
Database Exporter Error Messages 76
Delimiter 17
Detail View 10
Double 41
DWord 41

E

EFM Drivers 8
EFM History 14
Error adding exporter <exporter name>
 can't add gas exporters to liquid meters and can't add liquid exporters to gas meters. 62
Error Cause may strand unexported data stored at <Location>. Stranded data will not be exported.
 Please see help file for more details. 60
Error Descriptions 58
Error importing CSV data. Invalid exporter group path
 <path> 74
Error importing CSV data. Invalid meter group name
 <meter group>. 75
Error importing CSV data. No records found in CSV file. 75

Error importing CSV tag data. Field buffer overflow reading identification record. 75

Error importing CSV tag data. Unrecognized field name
<field name>. 76

Error importing CSV tag record <record number>: login timeout of <value> is out of range. Login timeout set to <value> 78

Error importing CSV tag record <record number>: table generation type <type> is not supported. Table generation type set to <type> 78

Error importing tag database. Duplicate field name
<field name>. 76

Error importing tag database. Missing tag field identification record. 76

Error writing data to DSN <DSN name>, table <table name> (Memory Exception). 86

Error writing data to DSN <DSN name>, table <table name> (Reason
<reason>). 86

Event (.EVT) Mappings 35

Event Log 10

Events 14

Exotic 27

Exporter <Exporter> failed to append to the existing <file> file. A new file is being created. Data from the existing file will be deleted 62

Exporter <Exporter> failed to move meter data from temp directory <temp file> to <output file> (reason: <reason>). The data will stay in the temp directory, and an attempt will be made to move the file after the next poll 62

Exporters 15

F

Failed Polls 12

Failed to add <EFM data that failed> data for meter <poll group name>.<meter type>.<channel name><device name><meter name> 63

Failed to add meter <Meter> to <Poll Group>. The meter already exists 63

Failed to create table <table name> for unknown reason. SQL query: <query> 79

Failed to create table <table name> on DSN <DSN name>. (Reason: <reason>) 79

Failed to create the data table <table name> - <reason> SQL query: <query> 79

Failed to create the data table <table name> (Memory Exception). SQL query: <query> 79

Failed to load data from <file name>. This data will not be available in future exports 63

Failed to register meters for <poll group name>. Please verify the meter configuration is correct. Polling will not start until the problems are resolved 64

Failed to remove temporary meter data file <file path>. Reason: Configuration change 64

Failed to save EFM data for exporter <Exporter> to file <CSV file> (reason: <reason>). The operation will be reattempted on the next poll 74

Failed to save EFM data for meter <meter> exporter <exporter> to file <file>. Reason
Failed to reset data store file (unknown). 65

Failed to save EFM data for meter <Meter> exporter <Exporter> to file <file>. The data is lost 65

Failed to save EFM data for meter <Meter> exporter <Exporter> to file <file>.Reason
Failed to update temporary data store file (unknown). 65

Failed to validate table <table name>. (Reason
The configured column name <column name> could not be found). 85

Failed to validate table <table name>. (Reason: The configured column name <column name> could not
be found) 80

File Path 28

Flange 42

Flow-Cal EFM data cached from the previously installed version is being converted. All EFM polls will be
postponed until the conversion is complete 66

Flow-Cal EFM data conversion complete. Legacy cached Flow-Cal EFM files have been moved to <backup
directory> 66

Flow-Cal EFM data conversion failed. <Extended Error>. Exported data will not include previously cached
data 67

Flow-Cal Exporter (CFX) 27

Flow-Cal exporter <Exporter> failed to output data for meter <Meter>. The meter did not provide valid
configuration data 83

Flow-Cal Exporter Error Messages 83

Flow-Cal Transaction Queue Exporter 29

Flow-Cal Transaction Queue Exporter Error Messages 84

Flow-Cal TXQ exporter <exporter name> failed to output data. The specified DSN <DSN name> is not an
Oracle DSN. 85

FPV Method 18, 24

G

Gas Quality 33, 52

Gas Quality (.ANA) Mappings 34

Gas Volume 33, 52

Gas Volume (.VOL) Mappings 37

Gauge 44

General Error Messages 58

General Properties 17

Gravity 45

Gross 27

H

Help Contents 6

History Interval 28-29, 33

I

Ignoring enable for <Exporter>. The exporter group <Exporter Group> is disabled 67

Ignoring enable for <Meter>. The meter group <Meter Group> is disabled 67

Ignoring on demand poll request for <meter>. A poll for this meter is already queued. 68

Ignoring on demand poll request for <meter>. The meter's group must have at least one enabled exporter and the meter must be licensed. 68

Ignoring on demand poll request for <meter>. The meter is disabled. 68

Ignoring on demand poll request for

Meter 13

Meter <Meter> returned bad quality EFM data for [<EFM data that failed>]. This EFM data will not be included in the output. 71

Meter <Meter> returned bad quality EFM data. This EFM data will not be included in the output. 71

Meter Browser 14

Meter Fields 48

Meter Group 13

Microsoft® ODBC Data Source Administrator 22, 30

Missing EFM Data 8

Monel 43

MS Access 22, 30

MySQL 22, 30

N

No new data for meter <Meter> exporter <Exporter>. 72

None 41

NX19/G1/G2 27

O

ODBC 21, 29

On Demand Polling Only 11

Open Export Path 28, 32

Oracle 22, 30

Oracle Instant Client 29

Orifice 41

Overview 7

P

Password 30

PGAS Exporter 32

PGAS Exporter <Exporter> failed to output data for meter <Meter>. The meter did not provide valid configuration data. 87

PGAS Exporter Error Messages 87

Pipe 42, 45

Pipe and Plate Material 18, 24

Pointer Files 9

Poll Group 11
Poll Group ended on demand poll at <time> 60
Poll Group ended poll at <time>. Next poll scheduled for <time> 60
Poll Group first poll scheduled for <time> local time. 60
Poll Group overran the next scheduled poll at <time>. The next poll has been rescheduled for <time>
local time 61
Poll group starting on demand poll at <time>. 61
Poll Group starting scheduled poll at <time> 61
Poll On Start 12
Poll Rate 11
Poll Rate Units 11
Positive Displacement 41
PostgreSQL 22, 30
Pressure 44
Project View 10

Q

Queue Exporter 29

R

Real 41
Record Time Format 32
Record Wildcards 40
Root Directory 49, 52

S

Sample Time 46
Server Wildcards 40
Shared EFM Data 8
Short 41
Specific Gravity 45
SQL 21
SQL Server 22, 30
Stainless Steel 43
Static Pressure Tap 18, 24

String 41

Supported Export Formats 7

System Tags 56

T

Table generation is not supported for ODBC Driver 80

Table Selection 23

Table validation failed. The table does not exist. 80, 86

Template 48

The exporter <Exporter Name> is incompatible with the meter group type. The exporter configuration will not be loaded 83

The history type <History Type> for Flow-Cal exporter <Exporter Name> is incompatible with the meter group type. Setting the history type to <Default History Type> 84

The licensed device count of <device license limit> has been exceeded by <unlicensed device count> device(s). 73

The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions 80

The query failed on DSN <DSN name>, table name <table name> because the data source is not appendable. Please double-check your user permissions. 86

Time Basis 16, 21

Time Format 16

Time Zone 9

Turbine 41

User Interface 10

UTC 16, 21, 32

UTF-8 17

V

V5 CFX 27

V7 CFX 27

Vcone 41

Viscosity 45

Volume (.VOL) 33

W

Wildcards 40

Word 41